



Assembly

- Take the steam ironing system to its installation site.

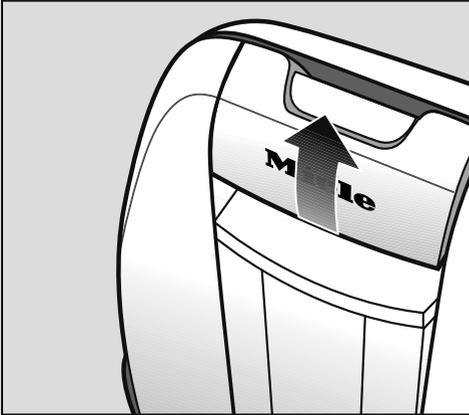


- Use one hand to pull the release mechanism upwards.

This releases the locking mechanism of the ironing board and the X-frame folds down.

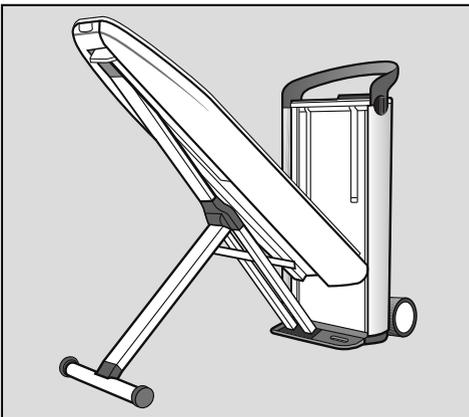


- Hold onto the release mechanism and guide the ironing board into a position of approx. 45°.

The ironing board remains in this position by itself.

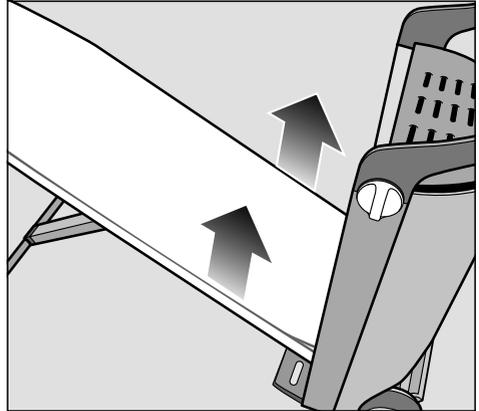


- Use both hands to pull the ironing board upwards into a horizontal position until it audibly clicks into place on both sides of the tower.

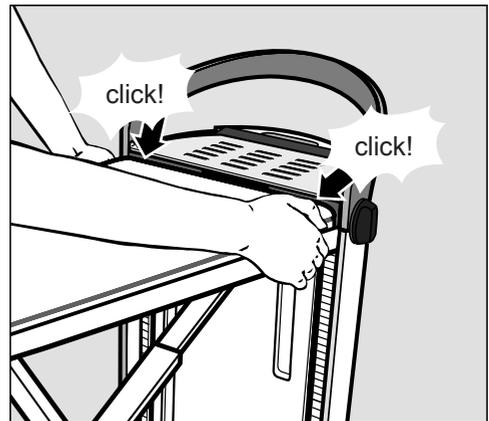

- Ensure the ironing board has locked into place on both sides of the tower.

The height adjustment and the fan in the ironing board only work if both sides of the appliance have locked into place.

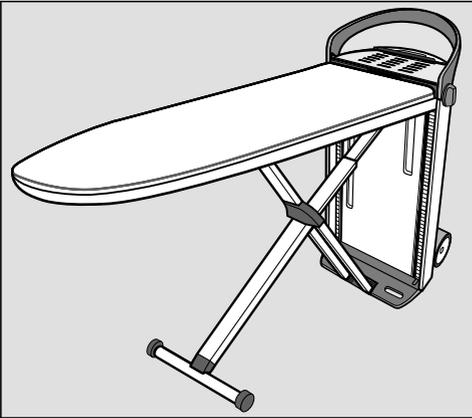


The steam ironing system is now assembled. This is its lowest working position of approx. 83 cm high.

Adjusting the height


The steam ironing system can be adjusted to suit your personal preference. The maximum working height is around 102 cm.

When adjusting the height, ensure the mains connection cable does not become trapped in the mechanism.

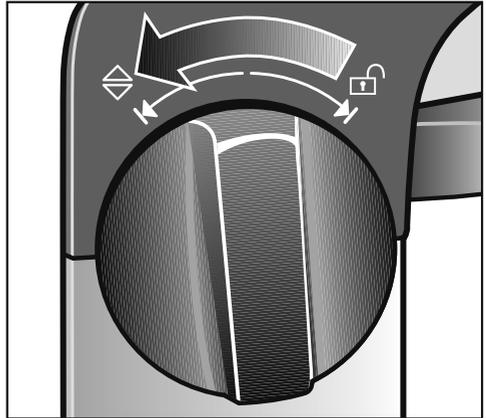

- Turn one of the rotary controls on the side of the tower handle as far as it will go in the  direction. Hold the rotary control in this position.

Assembly

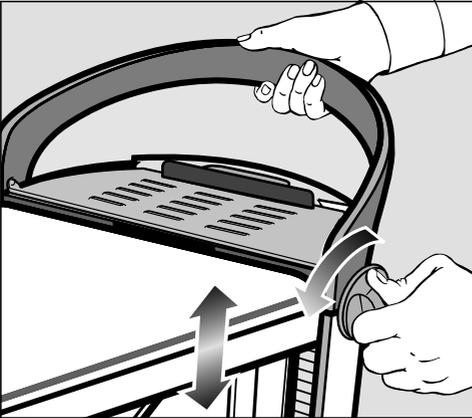

- At the same time, pull the handle upwards with the other hand or press the handle down.

Do not push down on the ironing board while adjusting the height. Always use the handle on the tower to adjust the height.

- When you have reached your desired working height, release the rotary control.


The rotary control will spring back into the centre position. The ironing board remains in this position by itself.

For additional stability, the ironing board locks into place under extra pressure with an audible click. Now the working height you selected is twice as secure.


Tip: Adjust your working position to approximately hip height for optimum comfort.

Insert the mains plug into the socket.

The steam ironing system is designed for connection to a properly installed earthed socket for AC 220-240 V, 50-60 Hz.

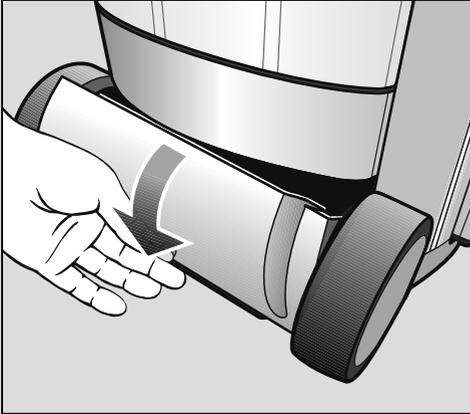


- Open the (lower) storage compartment by swinging the lid downwards.

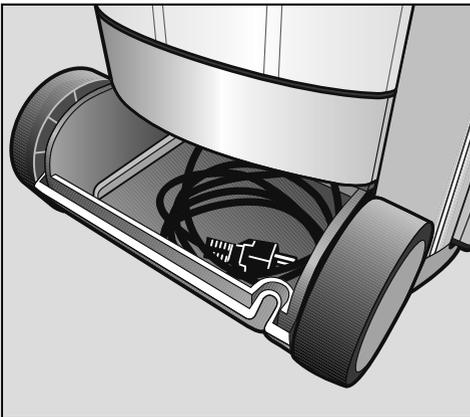

- Remove the power cable from the (bottom) compartment.

- Insert the plug into a suitable earthed socket (see chapter “Electrical connection”).

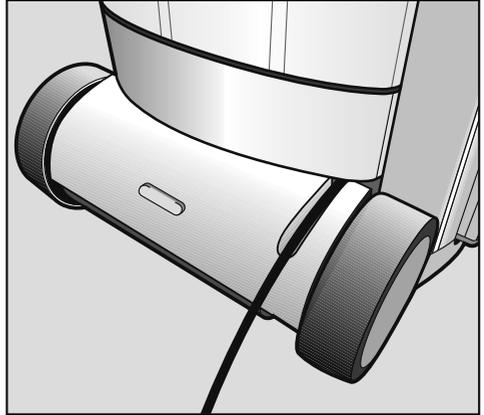


- Guide the power cable through the groove in the cover.
- Close the (bottom) storage compartment.


When closing the compartment, ensure the power cable does not become trapped between the cover and the housing or between the wheels and the tower.

Connection

Removing the iron and the steam hose holder

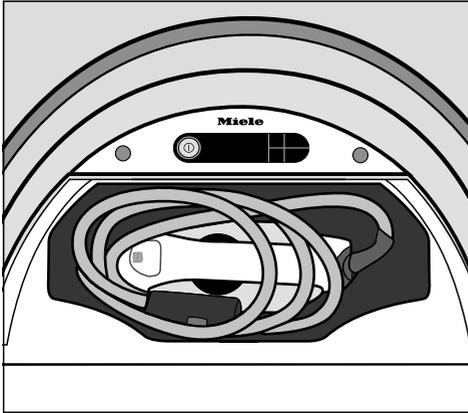

- Open the lid of the top storage compartment on the tower.
- Take out the iron.
- Close the storage compartment lid.

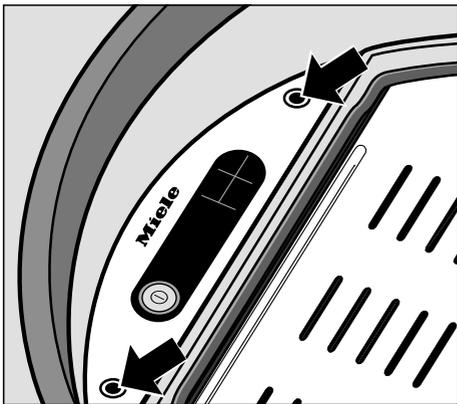


- Plug the steam hose holder supplied into one of the sockets provided.

Tip: Use the socket on the side on which you are ironing.

The steam ironing system is suitable for right- or left-handed people. The operation is optimised for both sides.

Connecting the steam hose


- Lift the lid of the steam connection.

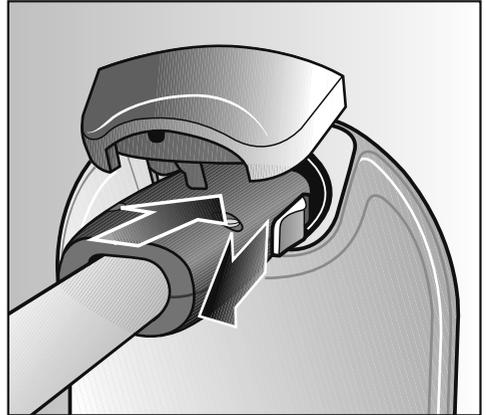

- Pull back the slider on the steam hose plug.
- Insert the plug into the steam connection.
- Release slider on the plug when it is locked into the steam connection.


The iron is now connected to the steam connection.

Connection

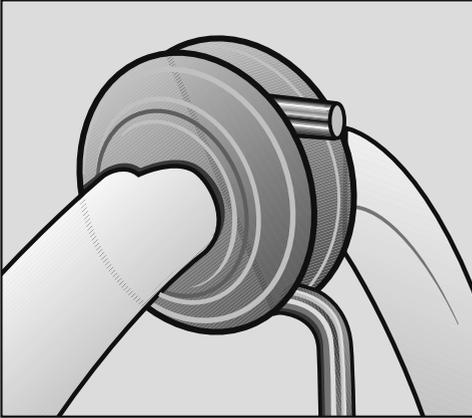

- Guide the steam hose on the rubber ring into the steam hose holder.

Ensure the steam hose fits tightly and is not twisted.

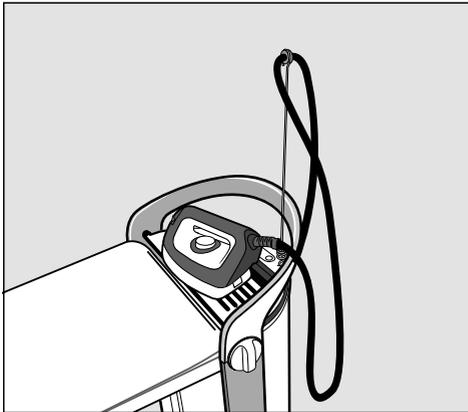

- To avoid damaging or discolouring the ironing board cover, always place the iron on the resting surface before you start ironing and when you take a break from ironing.

 Danger of the iron tipping over if it is placed upright on its edge.

An iron placed upright can easily tip over or fall to the floor.

Always place the iron onto the resting surface with its soleplate down.

 Danger of burning on the resting surface while it is hot.

If the iron remains on the resting surface for any length of time, the surface will become hot.

Avoid direct contact with the resting surface.

Only touch the handle on the lid.

Before turning on the steam ironing system, and before placing the iron down, make sure you switch off the continuous steam function.

If the continuous steam function is not switched off, the following message will appear in the display

 Release stm. button.

Unlock the  button by pushing the slider on the iron forward (see "Ironing").

Condensation can form on the resting surface. However, this does not affect the functioning of the steam ironing system.

Electrical connection

The appliance is supplied with a mains cable with moulded plug for connection. Please ensure the connection data (voltage and frequency) quoted on the data plate match the household mains supply. Please consult a qualified electrician if you are in any doubt.

Connection should be made via a suitable switched socket which is easily accessible after installation.

For extra safety it is advisable to operate the machine via a suitable residual current device (RCD). Contact a qualified electrician for advice.

Do not connect the appliance to the mains electricity supply by a multisolet adapter or an extension lead. These are a fire hazard and do not guarantee the required safety of the appliance.

If the connection cable is faulty, it may only be replaced by a qualified electrician in order to avoid a hazard.

Non-rewireable plugs BS 1363

The fuse cover must be refitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words on the base of the plug (as applicable to the design of plug fitted).

Replacement fuses must be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

WARNING: THIS APPLIANCE MUST BE EARTHED