

Quick Start Guide




for dishwashers

These short instructions are not a substitute for the operating instructions supplied with the appliance.

Please read the operating instructions supplied with your dishwasher before using it for the first time and take note of the Warning and Safety instructions, as well as the full descriptions on how to use your appliance.

en-AU, NZ


Guide to the appliance

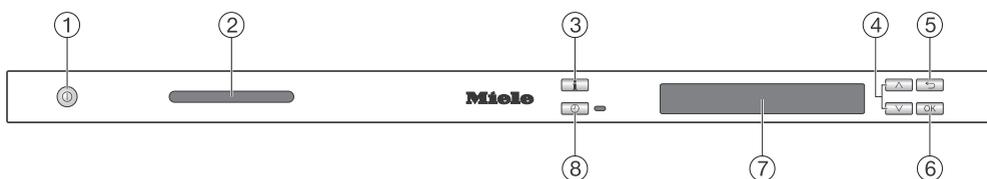

- ① On/Off sensor** 
For switching the dishwasher on and off.
- ② TimeControl In-operation indicator lights**
For displaying the programme time remaining with the door shut.
- ③ Information sensor i**
For displaying additional information about the option in the display.
- ④ Arrow sensors** 
For selecting programmes, altering values shown in the display and for navigating between different menus.
- ⑤ Back sensor** 
For navigating back to the previous menu or deleting values which have been set previously.
- ⑥ OK sensor**
For selecting the option shown in the display.
For confirming messages.
- ⑦ Display**
See next page for more information.
- ⑧ Delay start sensor**  **with indicator light**
For selecting the "Delay start" function.

Opening the door


This dishwasher has a motorised door opener which is activated by knocking on the door front ("Knock2open function").

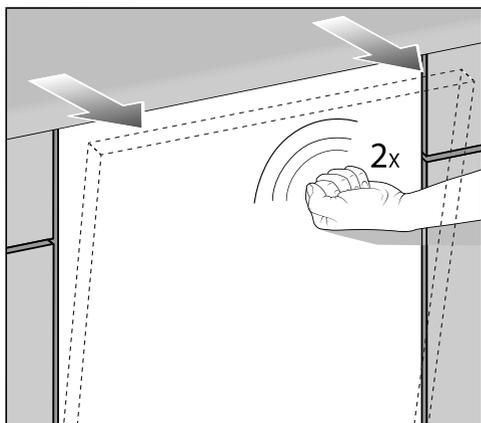

- Knock twice in quick succession on the top third of the door front.

The door will open a little.

Brief instructions

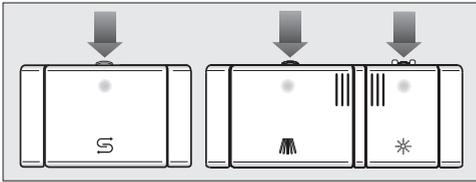

1 Filling the salt reservoir

- When filling the salt reservoir **only open the door halfway** to ensure that all the salt gets into the reservoir.
- Press the button on the lid of the salt reservoir in the direction of the arrow until the flap springs open.
- Lift up the funnel.

 Dishwasher detergent will damage the water softener. Do not fill the salt reservoir with powder or liquid detergent.

Do not fill the reservoir with water.

- Add dishwasher salt only until the reservoir is full or until water runs out of the opening.
- Clean any excess salt from around the reservoir opening and then close the flap.
- Immediately after filling the salt reservoir, run the *QuickPowerWash* programme with the *Short* programme option selected and without any crockery in the dishwasher to remove any traces of salt from the cabinet.

2 Adding rinse aid

- Press the button on the lid of the rinse aid reservoir in the direction of the arrow until the flap springs open.

- Add rinse aid only until it is visible in the opening.
- Close the flap firmly. It should click into place.
- Wipe up any spilled rinse aid. This prevents over-foaming occurring during the next programme.

3 Load the dishwasher

4 Adding detergent

- Follow the dosage recommended by the manufacturer on the packaging.
- Press the opening catch on the detergent dispenser. The flap will spring open.

The flap is always open at the end of a programme.

- Add the required amount of detergent and close the flap.

5 Switching on the dishwasher

- Turn on the tap if it is turned off.
- Open the door.
- Switch the dishwasher on using the  button.

The main menu will appear in the display.

If the Memory function is selected, the last programme selected will appear in the display instead of the main menu.

6 Selecting a programme

- Use the ∇/\wedge arrows to select the programme required.

The display will change to show the programme menu.

7 Selecting Extras (if required)

- Select the Extras option.

All available Extras will be shown in the display.

- Select the Extras you want using the *OK* button.

A tick will appear beside the Extra to show that it has been selected.

- To deselect an Extra you have chosen, simply press the *OK* button again.
- When you have finished selecting Extras, confirm with *Accept*.

The display will change back to the programme menu.

The number of Extras selected will appear in the programme menu.

8 Activating Delay start (if required)

- Press the  button.
- Select the function you want.
- Use the \vee/\wedge arrow buttons to set the time and confirm with *OK*.

The display will change to show the programme menu.

9 Starting the programme

- Start the programme by closing the door.

10 At the end of a programme - Switching off

At the end of a programme, the TimeControl indicator light will go out with the door shut.

The buzzer might also be sounding.

The programme has finished when *Finished* appears in the display and the door has opened slightly (if applicable).

In the *QuickPowerWash* programme the door will not open until a few minutes after the programme has finished.

The drying fan may continue to run for a few minutes at the end of the programme.

- Switch the dishwasher off using the  button.

 If you have deactivated the automatic door opening function but would still like to open the door at the end of the programme, then make sure that you open the door fully.

Otherwise steam from the dishwasher could damage the edge of the worktop because the fan is no longer running.

11 Unloading the dishwasher

Dishes tend to break and chip more easily when they are hot. Allow the dishes to cool until they are comfortable enough to handle before unloading them.

Cleaning and care

Checking the filters in the wash cabinet


 This dishwasher must not be used without all the filters in place.

The message **Check filters** will appear in the display after every 50 programme cycles (factory default setting).

- Check the condition of the filters regularly and clean them if necessary.
- Then confirm the message with **OK**.


Cleaning the filters

- Switch the dishwasher off.

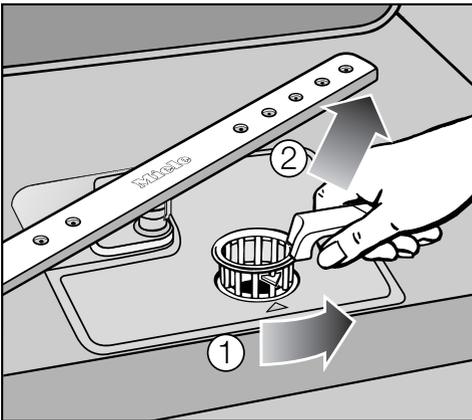

- Turn the handle anti-clockwise to release the filter combination ①.
- Lift the filter combination out of the dishwasher ②. Remove any coarse particles and rinse the filter well under running water. Use a nylon brush if necessary.

 Ensure that coarse soil doesn't get into the circulation system and cause a blockage.

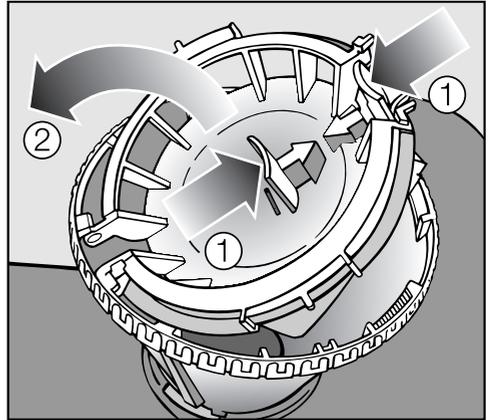

To clean the inside of the filter, the flap must be opened:

- Press catches ① together in the direction of the arrows as shown, and open the filter ②.
- Rinse all the filters under running water.
- Then close the flap so that the catch engages.
- Replace the filter combination so that it lies flat in the base of the wash cabinet.
- Then turn the handle clockwise until both arrows point towards each other. This will lock the filter combination in place.


Cleaning the spray arms

Particles of food can get stuck in the spray arm jets and bearings. The spray arms should therefore be inspected and cleaned regularly (approx. every 4 - 6 months).


- Switch the dishwasher off.

Remove the spray arms as follows:

- Take out the cutlery tray (if your dishwasher is fitted with one).
- Push the **top** spray arm upwards to engage the inner ratchet. Then unscrew the spray arm.

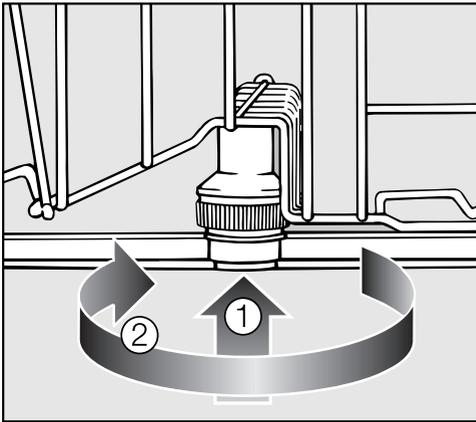


- Push the **middle** spray arm upwards ① to engage the ratchet. Then unscrew the spray arm ②.
- Remove the lower basket.

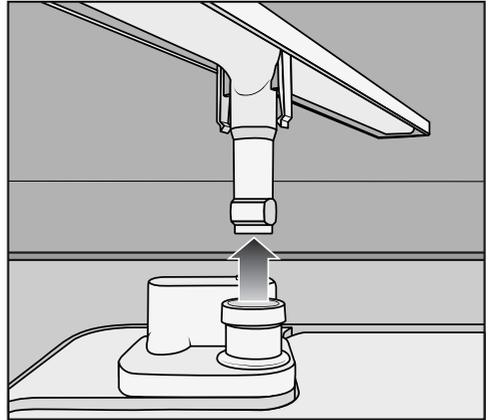

- Pull the **lower** spray arm firmly upwards to remove it.
- Use a pointed object to push food particles into the spray arm jets.
- Rinse thoroughly under running water.
- Refit the spray arms and check that they rotate freely.

Programme chart

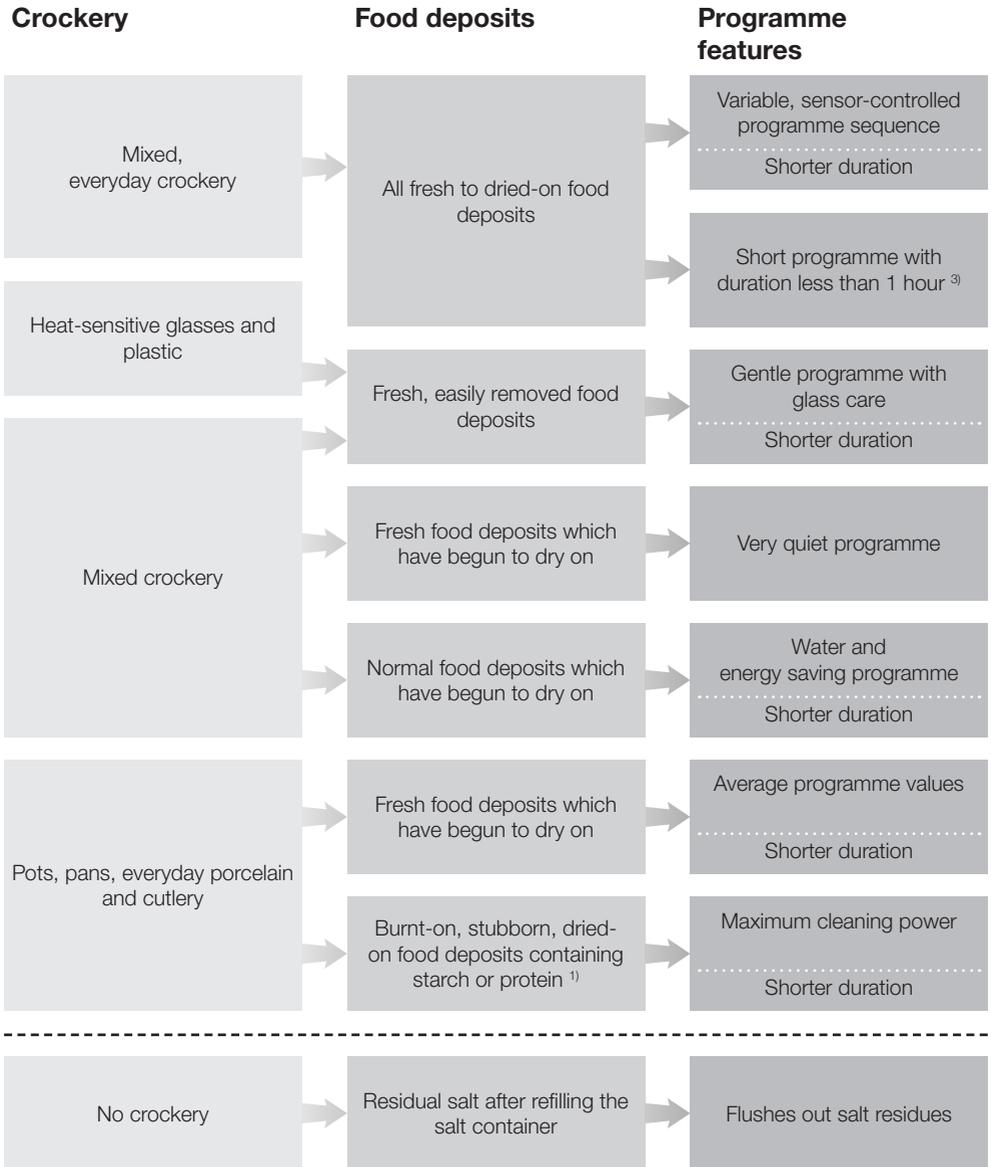

¹⁾ Food such as potatoes, pasta, rice or stews can leave starchy deposits. Deposits containing protein can be left by food such as meat, fish or eggs and bakes.

Programme	Detergent	
	Compartment I ²⁾	Compartment II ²⁾
Automatic ----- +short	-	25 ml or 1 tab
QuickPowerWash	-	1 tab ³⁾
Gentle  ----- +short	-	20 ml or 1 tab
ExtraQuiet	-	25 ml or 1 tab
ECO ----- +short	-	25 ml or 1 tab
Light soiling 55°C ----- +short	-	25 ml or 1 tab
Intensive 75°C ----- +short	10 ml	25 ml or 1 tab
<hr style="border-top: 1px dashed black;"/>		
QuickPowerWash +short	-	-

²⁾ see "Detergent"

³⁾ best cleaning results are only achieved with Miele's quick dissolving UltraTab Multi