


Applications

⚠ Before using the washer-dryer for the first time, ensure that it is correctly installed and connected. Install and connect the appliance as described in the operating instructions.


It is **essential** to read the separate operating instructions.

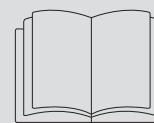

You can use this washer-dryer to:

- **wash separately** with a maximum load of 7.0 kg,
 - **dry separately** with a maximum load of 4.0 kg,
- or
- **wash and dry in a continuous sequence** with a maximum load of 4.0 kg.

Operation

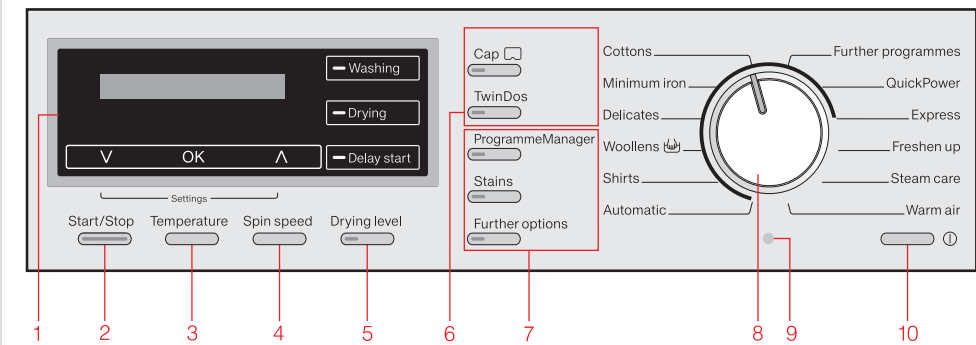

- 1 Display with sensors**
See points 11 to 16 for more information.
- 2 Start/Stop button**
For starting the programme selected and cancelling a programme once it has started.
- 3 Temperature button**
For selecting a wash temperature.
- 4 Spin speed button**
For selecting the spin speed.
- 5 Drying level button**
For selecting the drying level.

- 6 Dispensing buttons**
For selecting automatic detergent dispensing and CapDosing.
- 7 Options buttons**
Various options can be added to the programmes.
- 8 Programme selector**
For selecting washing and drying programmes.
- 9 Optical interface**
For service technicians.
- 10 Ⓞ button**
For switching the washer-dryer on and off.

- 11 V sensor**
Scrolls down the list to the next option or decreases a value.
- 12 OK sensor**
Confirms the programme selected, a value set or opens a sub-menu.
- 13 ^ sensor**
Scrolls up the list to the next option or increases a value.
- 14 Washing sensor**
For selecting the washing function.
- 15 Drying sensor**
For selecting the drying function.
- 16 Delay start sensor**
For selecting Delay start.

Environmentally friendly washing and drying

- Load the maximum amount for the programme you are using.
- When smaller amounts of laundry are washed, the Auto load control system will reduce the amount of water and energy used.
- Use the *Express* programme for small, lightly soiled loads.
- Modern detergents make it possible to wash at lower temperatures (e.g. 20°C). Using lower temperature settings will save energy.
- For precise dispensing, use automatic detergent dispensing.
- Selecting the highest possible spin speed for the wash programme will save energy when drying in a tumble dryer afterwards.

Separate washing

1. Preparing the laundry

- Empty all pockets.
- ⚠ Foreign objects (e.g. nails, coins, paper clips etc.) can cause damage to fabrics and to components in the machine.

- Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.
- Pre-treat stains and badly soiled areas (see the booklet "Miele's guide to laundry care").

2. Selecting a programme

- Press the Ⓞ button.

- Turn the programme selector to the required programme.

The maximum load for the wash programme selected will appear in the display. This will then be replaced by the standard display.

Selecting a programme via "Further programmes"

- Turn the programme selector to *Further programmes*.
 - Touch the V or ^ sensor until the programme you want appears in the display.
 - Confirm the programme with the OK sensor.
- The maximum load for the wash programme selected will appear in the display. This will then be replaced by the standard display.


3. Loading the drum

Opening the door

- Reach under the door grip and pull the door open.
- Unfold the laundry and load loosely in the drum.

Closing the door

- Make sure that no items are caught between the door and the seal.
 - Shut the door with a gentle swing.
- The display will ask you to enter the degree of soiling of the laundry.

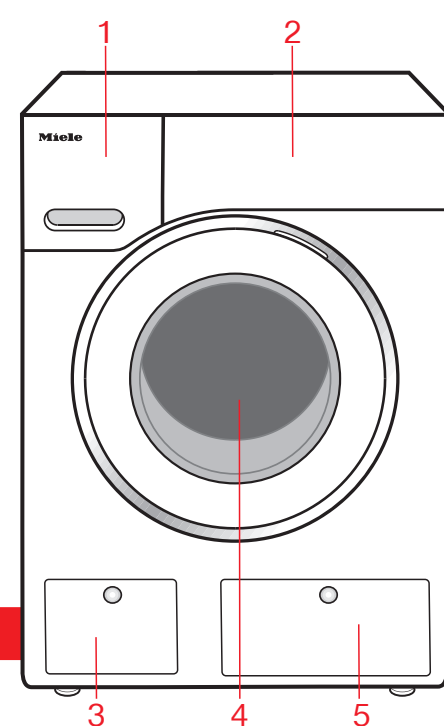

- 1 Detergent dispenser drawer**
- 2 Control panel**
- 3 Access to filters, pumps and emergency release**
- 4 Door**
- 5 Access panel for TwinDos containers**

4. Selecting programme settings

- Selecting the degree of soiling**
 - Select the degree of soiling with the V or ^ sensor and confirm with OK.

- Selecting the temperature**
 - Press the *Temperature* button.
 - Set the temperature you want with the V and ^ sensors and confirm your selection with the OK sensor.

- Selecting the spin speed**
 - Press the *Spin speed* button.
 - Set the spin speed you want with the V and ^ sensors and confirm your selection with the OK sensor.

- Selecting options**
 - Use the *ProgrammeManager*, *Stains* or *Further options* buttons for selecting the options you want.

- Selecting Delay start**
 - Select a Delay start time if required.

5. Adding detergent

Detergent can be dispensed via TwinDos, via the detergent dispenser drawer or with Caps.

TwinDos

The optimum amount of UltraPhase 1 and UltraPhase 2 will be dispensed automatically according to the colour mix of the load.

- Press the *TwinDos* button.

- Detergent dispenser drawer**
 - Pull out the detergent drawer and add detergent to the compartments U, UU or B.

CapDosing

There are different types of capsules available. Each capsule contains the correct amount of detergent for one wash cycle.

- Press the *Cap* button, select the type of capsule and place a capsule in the compartment.

Separate drying

DRYING

If you have washed a full load of laundry and you wish to dry the laundry in the washer-dryer afterwards, you will have to remove half the load and carry out the drying process in two loads.

1. Preparing the laundry

- Sort the laundry according to the type of fibre and weave, garment care label symbol and the drying level required.
- Before drying, check the drying symbol on the care label.

2. Selecting a programme

- Press the Ⓞ button.

- Turn the programme selector to the required programme.

- Turn the programme selector to *Further programmes*.

- Touch the V or ^ sensor until the programme you want appears in the display.
- Confirm with OK.

- Press the *Drying level* button.

Select the drying level or duration you want with the V and ^ sensors and confirm your selection with OK.

Selecting drying

- Touch the *Washing* and *Drying* sensors until just the *Drying* indicator light remains on.

The *Washing* indicator light must **not** be lit up as this would mean that the relevant wash programme would begin before the drying process.

3. Loading the drum

- Opening the door**
 - Reach under the door grip and pull the door open.
 - Load the laundry loosely in the drum.

Do not overload the drum. Overloading can cause unnecessary wear and tear of the laundry, give a disappointing drying result and cause more creasing.

- Remove foreign objects like detergent dispensing devices from the laundry.
- ⚠ They can melt and damage the dryer and the laundry.

Closing the door

- Shut the door with a gentle swing.
- Make sure that no items are caught between the door and the seal.

4. Selecting programme settings

- Press the *Drying level* button.
- Select the drying level or duration you want with the V and ^ sensors and confirm your selection with OK.

Selecting thermospin

- Press the *Spin speed* button.
- Set the spin speed you want with the V and ^ sensors and confirm your selection with the OK sensor.

- Selecting options**
 - Select the option you want using either the *ProgrammeManager* or *Further options* button.

Selecting Delay start

- Select a Delay start time if required.

5. Starting the programme

- Press the flashing *Start/Stop* button. The door will lock and the drying programme will start.

The programme status will appear in the display.

The mains water tap must be kept open for drying.

6. At the end of the programme

- The door remains locked during the anti-crease phase.
- Press the *Start/Stop* button. The door will be unlocked.

If you have unloaded the drum during the anti-crease phase, make sure you spread out the laundry to cool it down.

- Pull open the door.
- Remove the laundry.

See the section "After each washing or drying programme" in the chapter "Washing and drying in a continuous sequence".

- Switch the washer-dryer off.

Changing the programme sequence

Cancelling a programme

- Press the *Start/Stop* button and select *Cancel programme*.
 - Touch the OK sensor.
- The suds will be drained away or the laundry will be cooled down before the door can be opened.

Removing the laundry

- Pull the door open and unload the drum.

Selecting another programme

- Close the door.
- Select the required programme.
- Press the *Start/Stop* button.

Interrupting a programme

- Switch the washer-dryer off with the Ⓞ button.
- To continue the programme, switch the washer-dryer back on with the Ⓞ button.

⚠ Do not switch the washer-dryer off before the end of a drying programme. If this is done, all items must be removed immediately and spread out to cool down.

Changing

Changing a programme

- after the programme has started is not possible.

Changing the temperature

- is possible up to 5 minutes after the programme has started (not with the *Cottons* programme).
- Press the *Temperature* button.
- Change the temperature using the V or ^ sensor and confirm your choice with OK.

Changing the spin speed

- is possible up to the start of the spin cycle.
- Press the *Spin speed* button and change the spin speed.

Changing the drying level / drying duration

- is possible while a wash programme is running.
- Press the *Drying level* button and change the drying level.

Selecting or deselecting drying

- is possible while a wash programme is running.
- Touch the *Drying* sensor.

Changing options

- Some options can be selected or deselected after a programme has started.

Changes cannot be made while the safety lock is active.

Adding or removing laundry

You can add or remove items during the first few minutes after the programme has started.

- Press the *Start/Stop* button.
- Select *Add laundry* using the V or ^ sensor.

If this message does not appear in the display, then it is no longer possible to add or remove items of laundry.

- Confirm with OK.
- The programme will stop and the door will unlock.
- Pull open the door and add or remove items.
 - Close the door.
 - Press the *Start/Stop* button.
 - The programme will continue.

Washing and drying in one continuous sequence

Do not exceed the maximum load for the drying programme. It is very important to read the sections "Separate washing" and "Separate drying" before proceeding.

1. Preparing the laundry

- Sort the laundry according to the type of fibre and weave, garment care label symbol and the drying level required.

2. Selecting a programme

- Switch the washer-dryer on.
- Select the required programme.
- Touch the sensors for *Washing* and *Drying* repeatedly, until the *Washing* and *Drying* indicators are lit up.

3. Loading the drum

- Open the door.
- Unfold the laundry and load loosely in the drum.

⚠ Detergent dispensing aids, e.g. plastic dispenser balls, can melt during the drying programme and cause damage to the machine and the laundry. These dispensing aids must be removed from the laundry before drying.

- Close the door.

⚠ When closing the door, make sure that laundry does not get trapped in the door opening.

4. Selecting programme settings

- Select the degree of soiling.
- Select the temperature, spin speed and drying level and confirm each with OK.
- Select further options as required.
- Select a Delay start time if required.

5. Adding detergent

- Dispense detergent via TwinDos, CapDosing or the detergent dispenser drawer.

6. Programme start/finish

- Press the *Start/Stop* button. The door will lock. The programme status will appear in the display.
- The anti-crease phase will start at the end of the programme.
- Press the *Start/Stop* button. The door will be unlocked.

If you have unloaded the drum during the anti-crease phase, make sure you spread out the laundry to cool it down.

- Pull the door open and unload the drum.

See "After each washing or drying programme".

After each washing or drying programme

- Open the drum door **fully**.

⚠ Caution! The metal cap is hot after drying. Do not touch the metal cap located on the inside of the door glass.

- Remove the laundry.
- Check the folds in the door seal for any small articles, e.g. buttons, which might be lodged there.
- After drying, remove any fluff from around the door seal and the porthole glass.

Check that all items have been removed from the drum. Items left behind could be damaged in the next washing or drying programme.

- Switch the washer-dryer off.
- Tip:** Leave the detergent dispenser drawer slightly open to allow it to dry.

Rinse out fluff programme

During drying, fluff is developed and can collect in the drum and suds container.

The *Rinse out fluff* programme must not be used for rinsing laundry.

- Switch the washer-dryer on.
- With the programme selector dial set to the *Further programmes* position, select the *Rinse out fluff* programme.

Do not use detergent.

- Press the *Start/Stop* button. Any fluff will be rinsed away within a few minutes.
- If necessary, wipe any remaining fluff off the door seal and door glass.
- Switch the washer-dryer off.

Options

Options are selected and deselected with the *ProgrammeManager*, *Stains* or *Further options* buttons.

Example:

- Press the *ProgrammeManager* button. The following will appear in the display, for example:

Short

- Touch the \vee or \wedge sensor until the option you want appears in the display.
- Confirm with the *OK* sensor. The indicator light in the button will come on.

ProgrammeManager

The ProgrammeManager option can be used to customise the wash programmes to suit your requirements.

Stains (washing only)

In order to clean stained laundry more effectively, you can choose between different types of stains with some programmes. The wash programme will then adapt to the type of stain selected.

Further options

You can use the *Further options* button to select more options for washing and drying programmes.

Thermospin (drying only)

A thermospin is carried out in some drying programmes to reduce energy consumption.

Not all options are suitable for use with every programme. An overview can be found in the operating instructions.

Programme chart - Washing

| Programme | Load (in kg) | Items | Temperature |
|---------------------|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
| Cottons | 7.0 | Cottons, linens or cotton mix fabrics, e.g. table linen, towelling, underwear, T-shirts etc. <i>Where a higher degree of cleanliness is required use the Cottons hygiene programme.</i> | Cold to 90°C |
| Minimum iron | 3.5 | Synthetic, mixed fibre and easy care cotton | Cold to 60°C |
| Delicates | 2.0 | Delicate garments made from synthetic fibre, mixed fibre, rayon and viscose | Cold to 60°C |
| Woollens | 2.0 | For items which crease easily, deselect the spin. Machine-washable or hand-washable wool or wool blend fabric | Cold to 40°C |
| Shirts | 2.0 | Reduce the spin speed for items which crease easily. Shirts and blouses made of cotton and mixed fibre | Cold to 60°C |
| Automatic | 5.0 | Turn shirts and blouses inside out, do up buttons and turn collars and cuffs inwards. Mixed loads of garments sorted according to colour which are suitable for the <i>Cottons</i> and <i>Minimum iron</i> programmes | Cold to 40°C |
| QuickPower | 4.0 | Moderately soiled garments which are also suitable for washing in the Cottons programme | 40°C to 60°C |
| Express | 3.5 | A special saturation process and wash rhythm ensure that the laundry is cleaned particularly quickly and thoroughly. Cotton garments that have hardly been worn or are only very lightly soiled | Cold to 40°C |

An explanation of further programmes can be found in the "Washing: Programme chart" in the operating instructions.

Programme chart - Drying

| Programme | Load* (in kg) | Items | Drying levels |
|---------------------|---------------|---------------------------------------------------------------------------------------------------------------------|------------------------|
| Cottons | 4.0 | Cottons, linens or cotton mix fabrics, e.g. table linen, towelling, underwear, T-shirts etc. | A, B, C, D, E, F, G, H |
| Minimum iron | 3.5 | For minimum iron items made of cotton, synthetic, or mixed fibre | B, C, D, G, H |
| Delicates | 1.0 | Delicate items with the symbol on the care label made of synthetic fibre, mixed fibre, rayon, and easy care cotton | C, D, H |
| Woollens | 1.0 | Woolen garments and fabric containing wool blends. The garments are only fluffed up, but not dried completely. | H |
| Shirts | 1.0 | Shirt and blouses made of cotton and mixed fibres | B, C, D, G, H |
| Automatic | 3.0 | Mixed loads of garments suitable for the <i>Cottons</i> and <i>Minimum iron</i> programmes | B, C, D, G, H |
| QuickPower | 4.0 | Garments suitable for the <i>Cottons</i> programme | A, B, C, D, E, F, G, H |
| Express | 3.5 | Garments suitable for the <i>Cottons</i> programme | A, B, C, D, E, F, G, H |
| Freshen up | 1.0 | Clean, dry garments and garments that have been worn briefly and are not soiled. | C, E, H |
| Steam care | 2.0 | Reduces the amount of creasing in damp, freshly washed and spun cotton or linen garments | D, E, H |
| Warm air | 4.0 | For drying and airing individual items | H |

* Weight of dry laundry
 A = Extra dry; B = Normal; C = Normal; D = Normal; E = Normal; F = Normal; G = Normal; H = Normal
 A = Extra dry; B = Normal; C = Normal; D = Normal; E = Normal; F = Normal; G = Normal; H = Normal
 An explanation of further programmes can be found in the "Drying: Programme chart" in the operating instructions.

Problem solving guide

To switch off the fault message, switch the washer-dryer off with the \odot button.

Problem/Fault message

The display remains dark and the Start/Stop button indicator light does not come on.

You are asked to enter a code.

The display is dark.

The following appears in the display:

Service. Door jammed

The programme has been cancelled and the following fault message appears in the display:

Check drainage. See

The programme has been cancelled and the following fault message appears in the display:

Water intake. See

The programme has been cancelled and the following fault message appears in the display:

Service. Waterproof syst.

The programme has been cancelled and the following fault message appears in the display:

Service. Fault F

Possible cause and remedy

There is no power to the machine.

- Check whether the mains plug is plugged in and switched on.
- Check whether the mains circuit breaker has tripped.

Access via a code has been activated.

- Enter the code and confirm the entry. Deactivate the code if you do not wish this message to appear in the display the next time the machine is switched on.

The display has switched off automatically to save energy (Standby mode).

- Press any button. Standby will finish.

The door is not closed properly. The door lock could not engage.

- Close the door again.
- Start the programme again.

If the fault message appears again, contact Miele. The door will not open. The door lock has jammed.

- Call Miele.

The water outlet is blocked or restricted. The drain hose has been fixed too high.

- Clean the drain filter and the pump.
- Check whether the maximum delivery height of 1 m has been exceeded.

The water inlet is blocked or restricted.

- Check whether the tap is turned on properly.
- Check whether the inlet hose is kinked.

If the fault message appears again, contact Miele.

The water protection system has reacted.

- Turn off the tap.
- Call Miele.

There is a fault.

- Restart the programme.

If the fault message appears again, contact Miele.

Problem/Fault message

The following appears in the display:

Check load

The following appears in the display:

Check detergent

The following appears in the display:

Hygiene info

The following appears in the display:

Start the "Rinse out fluff" programme under "Further programmes"

The following appears in the display:

Use "TwinDos" or start Maintenance. See

The following appears in the display:

TwinDos Mainten. for comp. 1 must be started. See

At the end of the programme or after a programme cancellation: Cooling down or Extra cooling appears in the display.

The washer-dryer is not steady during a spin cycle.

Possible cause and remedy

There is very little or no laundry in the drum.

- In future use a timed drying programme for drying only a few individual items.

A machine overload was detected.

- In future adhere to the maximum load limit for each programme.

Excessive foam has built up during washing.

- Check the amount of detergent dispensed.
- Use less detergent next time and follow the manufacturer's instructions on dosage given on the packaging.

See "Cleaning the drum" in the chapter "Cleaning and care".

The *Rinse out fluff* programme has not been used for a long time.

- Start the "Rinse out fluff" programme as described in "Washing and Drying" - "Rinse out fluff programme".

TwinDos or automatic dispensing via compartment 1/2 has not been used for a long time.

- Use TwinDos for one of your next loads.
- Carry out the TwinDos maintenance programme as described in "Cleaning and care - TwinDos maintenance".

TwinDos or automatic dispensing via compartment 1/2 has not been used for a long time. It is possible that detergent has dried inside the hoses.

- Carry out the TwinDos maintenance programme immediately as described in "Cleaning and care - TwinDos maintenance".

For safety reasons, the door cannot be opened if the temperature in the drum exceeds 55°C during washing or 70°C during drying.

- Wait until the temperature in the drum has decreased and the message has gone out in the display.

The machine feet are not level.

- Level the washer-dryer and secure the feet.

Quick Start Guide Washer-dryer



These short instructions are not a substitute for the operating instructions supplied with the appliance. Please read the operating instructions supplied with your washer-dryer before using it for the first time and take note of the Warning and Safety instructions, as well as the full descriptions on how to use your appliance.