

Applications

⚠ Before using the washer-dryer for the first time, ensure that it is correctly installed and connected. Install and connect the appliance as described in the operating instructions.


It is **essential** to read the separate operating instructions.



You can use this washer-dryer to:

- **wash separately** with a maximum load of 8.0 kg,
 - **dry separately** with a maximum load of 4.0 kg,
- or
- **wash and dry in a continuous sequence** with a maximum load of 4.0 kg.

Operation

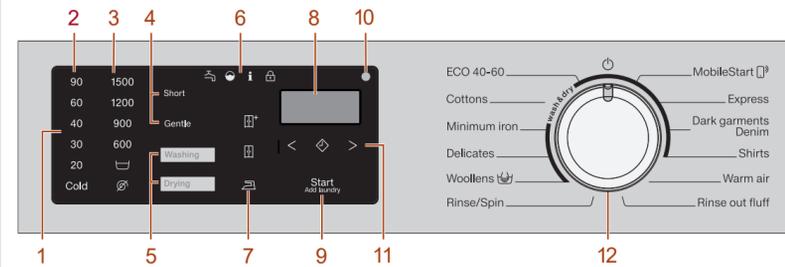

- Control panel** consists of a time display and various sensors
- Temperature sensors** for selecting the temperature
- Spin speed sensors** for setting the spin speed
- Extras sensors** for selecting Extras
When a programme is selected, the sensors for the possible Extras light up.
- Washing/Drying sensors**
You can use the Washing and Drying sensors to select whether you want to wash, dry or wash and dry.
- Indicator lights**

- 🔌 Fault with water inlet or drainage
- ⚠ Excess detergent used
- ℹ Displays information (see "Problem solving guide")
- ➕ The Add laundry function cannot be selected

- Drying level sensors**
Select the drying level of a drying programme using the Δ , \square and \square^+ sensors.
- Time display** for displaying the programme duration
- Start/Add laundry sensor**
 - flashes on and off as soon as the programme can be started
 - lights up constantly when a programme has started
 - allows you to add laundry

- Optical interface** for service technicians
- Delay start sensor** with arrow sensors < and >. You can delay the start of a programme.
- Programme selector** for selecting programmes and for switching off the appliance. The washer-dryer is switched on by selecting a programme. You can switch the washer-dryer off by turning the programme selector to the \odot position.

Environmentally friendly washing and drying

- Load the maximum amount for the programme you are using.
- Programmes that are more efficient with regard to energy and water consumption generally have a longer programme running time. By extending the programme running time, the wash temperature that is actually reached can be reduced while still providing the same wash results.
- Use the *Express* programme for small, lightly soiled loads.
- Modern detergents make it possible to wash at lower temperatures (e.g. 20°C). Using lower temperature settings will save energy.
- Do not exceed the amounts of detergent recommended by the manufacturer on the packaging.
- Selecting the highest possible spin speed for the wash programme will save energy when drying in a tumble dryer afterwards.

Separate washing

1. Preparing the laundry



- Empty all pockets.
- ⚠ Foreign objects (e.g. nails, coins, paper clips etc.) can cause damage to fabrics and to components in the machine.
- Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.
- Pre-treat stains and badly soiled areas (see "ABC of Stains" on the Miele website.).

2. Loading the drum

- Opening the door**
- Reach under the door grip and pull the door open.
 - Unfold the laundry and load loosely in the drum.
- Check the drum for pets or foreign objects before loading it with laundry.

- Tip:** Please note the maximum load size for different wash programmes.
- Closing the door**
- Make sure that no items are caught between the door and the seal.
 - Shut the door with a gentle swing.


3. Selecting a programme

- Switching the washer-dryer on**
- Turn the programme selector to a programme. The control panel lights up.

- Selecting a programme**
- Turn the programme selector to the required programme. The estimated wash time is shown in the time display and the preset temperature and spin speed light up on the control panel.

Selecting washing

- Touch the *Washing* or *Drying* sensor until just the *Washing* sensor is brightly lit up.
- The *Drying* sensor must only light up dimly as otherwise the wash programme would be followed immediately by the relevant drying programme.

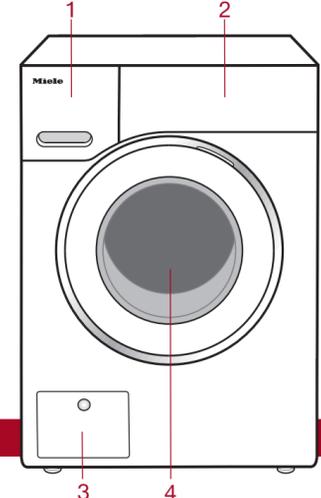

- Detergent dispenser drawer**
- Control panel**
- Access to filter, pump and emergency release**
- Door**

Selecting the temperature and spin speed


- Touch the sensor for the temperature and spin speed you want. The sensor lights up brightly.

- Selecting Extras**
- The sensors for the *Short* and *Gentle* Extras light up dimly when they can be selected in addition to the programme.
- Touch the sensor for the Extra you want. The sensor lights up brightly.

- Selecting Delay start**
- Select a Delay start time if required.

- 4. Adding detergent**
- Detergent can be dispensed via TwinDos, via the detergent dispenser drawer or with Caps.

Detergent dispenser drawer

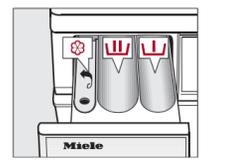

- Pull out the detergent drawer and add detergent to the compartments \cup , \cup or \otimes .

- CapDosing**
- CapDosing can only be activated via the Miele@ mobile App.

There are different types of capsules available. Each capsule contains the correct amount of detergent for one wash cycle.

Caps are available from shop.miele.com, by contacting Miele directly, or at a Miele Experience Centre.

Separate drying

SEPARATE WASHING

5. Starting the programme

- Touch the flashing *Start/Add laundry* sensor. The door will lock and the programme will start.

6. At the end of the programme

- The door remains locked during the Anti-crease phase.
- Turn the programme selector to the \odot position.
 - -D- appears in the time display, the \odot indicator light goes out and the door will unlock.
 - Pull open the door.
 - Remove the laundry.

- ⚠ Check that all items have been removed from the drum.

- Check the folds in the door seal for any small articles, e.g. buttons, which might be lodged there.
- Remove any used capsules from the detergent dispenser drawer. Leave the detergent dispenser drawer slightly open to allow it to dry.

- See the section "After each washing or drying programme" under "Washing and drying in one continuous sequence".

- MobileStart** \square^+
- Programmes can also be selected and started via MobileStart \square^+ . To do this, the washer-dryer must be connected to a Wi-Fi network (see "Before the first use" in the operating instructions).

- Closing the door**
- Shut the door with a gentle swing.
 - Make sure that no items are caught between the door and the seal.

If you have washed a full load of laundry and you wish to dry the laundry in the washer-dryer afterwards, you will have to remove half the load and carry out the drying process in two loads.

1. Preparing the laundry

- Sort the laundry according to the type of fibre and weave, garment care label symbol and the drying level required.
- Before drying, check the drying symbol on the care label.

2. Loading the drum

- Opening the door**
- Reach under the door grip and pull the door open.
 - Load the laundry loosely in the drum.
- Do not overload the drum. Overloading can cause unnecessary wear and tear of the laundry, give a disappointing drying result and cause more creasing.

- Remove foreign objects like detergent dispensing devices from the laundry.
- ⚠ They can melt and damage the dryer and the laundry.

- Closing the door**
- Shut the door with a gentle swing.
 - Make sure that no items are caught between the door and the seal.

3. Selecting a programme

- Switching the washer-dryer on**
- Turn the programme selector to a programme. The control panel lights up.

- Selecting a programme**
- Turn the programme selector to the required programme. The estimated programme running time is shown in the time display and the preset temperature and spin speed light up in the control panel.

Selecting drying

- Touch the *Washing* or *Drying* sensor until just the *Drying* sensor is brightly lit up.
- The *Washing* sensor must only light up dimly as otherwise the relevant wash programme would begin before the drying process.

4. Selecting programme settings

- Selecting the drying level**
- Touch the sensor for the required drying level. The sensor for the selected drying level lights up brightly.
- \square^+ - Normal plus
 - \square - Normal
 - \square^- - Hand iron

- Selecting a thermospin spin speed**
- The preset spin speed for the thermospin can be changed if required.
- Touch the sensor for the spin speed you want.

- Selecting Extras**
- The sensor for the *Gentle* Extra light up dimly if the *Gentle* Extra can be selected in addition to the programme.
- Touch the *Gentle* sensor. The sensor lights up brightly.

- Selecting Delay start**
- Select a Delay start time if required.

5. Starting the programme

- Touch the flashing *Start/Add laundry* sensor. The door will lock and the drying programme will start.
- The mains water tap must be kept open for drying.

6. At the end of the programme

- The door remains locked during the Anti-crease phase.
- Turn the programme selector to the \odot position. The door will unlock.
- If you have unloaded the drum during the Anti-crease phase, make sure you spread out the laundry to cool it down.

- Pull open the door.
 - Remove the laundry.
- See the section "After each washing or drying programme" under "Washing and drying in one continuous sequence".

Changing the programme sequence

- Changing**
- It is not possible to change the programme, the temperature, the spin speed or the selected Extras after the programme has started. This prevents the appliance being operated unintentionally, e.g. by children.

cancelling a programme

- You can cancel a programme at any time after it has started.
- Turn the programme selector to the \odot position. The programme is interrupted.
 - Turn the programme selector to any position.
 - Rotating bars \llcorner ... \llcorner ... \llcorner appear in the time display.

- The suds will be drained away or the laundry will be cooled down before the door can be opened.

Removing the laundry

- Wait until the \odot symbol in the display goes out and the door is unlocked.
- Pull the door open and unload the drum.

Selecting another programme

- Close the door.
- Select the required programme.
- Touch the *Start/Add laundry* sensor.

- Adding or removing laundry**
- You can add or remove items during the first few minutes after the programme has started.
- Laundry **cannot** be added if the \odot symbol is illuminated in the display.
- Touch the *Start/Add laundry* sensor. Rotating bars \llcorner ... \llcorner ... \llcorner appear in the time display.
 - Add or remove items.
 - Close the door.
 - Touch the *Start/Add laundry* sensor. The programme will continue.

SEPARATE DRYING



Quick Start Guide Washer-dryer



These short instructions are not a substitute for the operating instructions supplied with the appliance. Please read the operating instructions supplied with your washer-dryer before using it for the first time and take note of the Warning and Safety instructions, as well as the full descriptions on how to use your appliance.

Problem solving guide

Problem/Fault message	Possible cause and remedy
The control panel remains dark.	There is no power to the machine. <ul style="list-style-type: none"> Check whether the mains plug is plugged in and switched on. Check whether the circuit breaker has tripped. The washer-dryer has switched off automatically to save energy. <ul style="list-style-type: none"> Switch the washer-dryer on again by turning the programme selector. The door is not closed properly. The door lock could not engage. <ul style="list-style-type: none"> Close the door again. Start the programme again. If the fault message appears again, contact Miele.
F and 34 alternate in the time display.	The door will not open. The door lock has jammed. <ul style="list-style-type: none"> Call Miele. The water inlet is blocked or restricted. <ul style="list-style-type: none"> Check whether the tap is turned on properly. Check whether the inlet hose is kinked. The water outlet is blocked or restricted. The drain hose has been fixed too high. <ul style="list-style-type: none"> Clean the filters and the drain pump. Check whether the maximum delivery height of 1 m has been exceeded. The water protection system has reacted. <ul style="list-style-type: none"> Turn off the tap. Call Miele. There is a fault. <ul style="list-style-type: none"> Switch off at the wall and withdraw the plug from the socket, or switch off the mains circuit breaker. Wait at least 2 minutes before reconnecting the washer-dryer to the electricity supply. Restart the programme. If the fault message appears again, contact Miele.
F and 34 alternate in the time display.	The door will not open. The door lock has jammed. <ul style="list-style-type: none"> Call Miele. The water inlet is blocked or restricted. <ul style="list-style-type: none"> Check whether the tap is turned on properly. Check whether the inlet hose is kinked. The water outlet is blocked or restricted. The drain hose has been fixed too high. <ul style="list-style-type: none"> Clean the filters and the drain pump. Check whether the maximum delivery height of 1 m has been exceeded. The water protection system has reacted. <ul style="list-style-type: none"> Turn off the tap. Call Miele. There is a fault. <ul style="list-style-type: none"> Switch off at the wall and withdraw the plug from the socket, or switch off the mains circuit breaker. Wait at least 2 minutes before reconnecting the washer-dryer to the electricity supply. Restart the programme. If the fault message appears again, contact Miele.
The fault indicator light lights up. F and 10 alternate in the time display and the buzzer sounds.	The water inlet is blocked or restricted. The drain hose has been fixed too high. <ul style="list-style-type: none"> Clean the filters and the drain pump. Check whether the maximum delivery height of 1 m has been exceeded. The water protection system has reacted. <ul style="list-style-type: none"> Turn off the tap. Call Miele. There is a fault. <ul style="list-style-type: none"> Switch off at the wall and withdraw the plug from the socket, or switch off the mains circuit breaker. Wait at least 2 minutes before reconnecting the washer-dryer to the electricity supply. Restart the programme. If the fault message appears again, contact Miele.
The fault indicator light lights up. F and 13B alternate in the time display and the buzzer sounds.	The water protection system has reacted. <ul style="list-style-type: none"> Turn off the tap. Call Miele. There is a fault. <ul style="list-style-type: none"> Switch off at the wall and withdraw the plug from the socket, or switch off the mains circuit breaker. Wait at least 2 minutes before reconnecting the washer-dryer to the electricity supply. Restart the programme. If the fault message appears again, contact Miele.
F and XXX alternate in the time display and the buzzer sounds.	There is a fault. <ul style="list-style-type: none"> Switch off at the wall and withdraw the plug from the socket, or switch off the mains circuit breaker. Wait at least 2 minutes before reconnecting the washer-dryer to the electricity supply. Restart the programme. If the fault message appears again, contact Miele.

* Weight of dry laundry
☐ = Normal plus; ☐ = Normal; ☐ = Hand iron 0

PROGRAMME OVERVIEW

Programme chart - Drying

Programme	Load* (in kg)	Items	Drying levels
ECO 40-60	4.0	For cotton fabrics.	☐, ☐, ☐, ☐
Cottons	4.0	Cottons, linens or cotton mix fabrics, e.g. table linen, towelling, underwear, T-shirts etc.	☐, ☐, ☐, ☐
Minimum iron	3.5	For minimum iron items made of cotton, synthetic, or mixed fibre.	☐, ☐, ☐, ☐
Delicates	1.0	Delicate items with the ☐ symbol on the care label made of synthetic fibre, mixed fibre, rayon, and easy care cotton. <i>Reducing the load will reduce creasing.</i>	☐, ☐, ☐, ☐
Woolens	2.0	For woollen garments and fabric containing wool blends. <i>Wool and wool blend fabrics and woollen garments are only fluffed up; they are not dried completely.</i>	3 min ☐, ☐, ☐, ☐
Express	3.5	Garments suitable for the Cottons programme. <i>The programme running time for this programme is particularly short when washing and drying lightly soiled laundry in a continuous sequence.</i>	☐, ☐, ☐, ☐
Dark garments/Denim	3.0	Black and dark garments made from cotton, mixed fibres and denim.	☐, ☐, ☐, ☐
Shirts	2.0	Shirts and blouses made of cotton and mixed fibres. <i>Turn shirts and blouses inside out, do up buttons and turn collars and cuffs inwards.</i>	☐, ☐, ☐, ☐
Warm air	4.0	Multi-layered items whose layers have different drying characteristics, e.g. jackets, pillows, sleeping bags and other voluminous items. For drying and airing individual items.	☐, ☐, ☐, ☐ 20-120 minutes

Programme chart - Washing

Programme	Load* (in kg)	Items	Temperature
ECO 40-60	8.0	Normally soiled cotton garments. <i>A laundry load that is intended for washing at 40°C or 60°C can be washed in the same wash cycle.</i>	Cold to 90°C
Cottons	8.0	Cottons, linens or cotton mix fabrics, e.g. table linen, towelling, underwear, T-shirts etc.	Cold to 90°C
Minimum iron	3.5	Synthetic, mixed fibre and easy care cotton. <i>Reduce the spin speed for items which crease easily.</i>	Cold to 60°C
Delicates	2.0	Delicate garments made from synthetic fibre, mixed fibre, rayon and viscose. <i>For items which crease easily, deselect the spin.</i>	Cold to 40°C
Woolens	2.0	Machine-washable or hand-washable wool or wool blend fabric. If the care label does not specify a temperature, wash using the cold setting. <i>Reduce the spin speed for items which crease easily.</i>	Cold to 40°C
Express	3.5	Cotton garments that have hardly been worn or are only lightly soiled.	Cold to 40°C
Dark garments/Denim	3.0	Black and dark garments made from cotton, mixed fibres and denim. <i>Wash inside out.</i>	Cold to 60°C
Shirts	2.0	Shirts and blouses made of cotton and mixed fibre. <i>Turn shirts and blouses inside out, do up buttons and turn collars and cuffs inwards.</i>	Cold to 40°C

An explanation of further programmes can be found in the "Washing: Programme chart" in the operating instructions.

WASHING AND DRYING IN ONE CONTINUOUS SEQUENCE / EXTRAS

Selecting Extras
The sensors for the *Short* and *Gentle* Extras light up dimly when they can be selected in addition to the programme.

- Touch the sensor for the Extra you want.

Washing
- *Gentle*
Drum rotation and wash duration are reduced. Lightly soiled fabrics are washed more gently.
- *Short*
For textiles with light soiling with no visible stains.
The duration of the main wash is reduced.

Drying
- *Gentle*
Delicate textiles such as acrylics are dried gently (☐ care label symbol).
The programme running time will increase when the Gentle Extra is selected because of the lower temperature.

Thermospin (drying only)
A spin cycle is carried out in some drying programmes to reduce energy consumption.

After each washing or drying programme

- Open the drum door **fully**.
 - Risk of burning! The metal cap is hot after drying. Do not touch the metal cap located on the inside of the door glass.
- Remove the laundry.
- Check the folds in the door seal for any small articles, e.g. buttons, which might be lodged there.
- After drying, remove any fluff from around the door seal and the porthole glass.

 Check that all items have been removed from the drum. Items left behind could be damaged in the next washing or drying programme.

- Switch the washer-dryer off.
Tip: Leave the detergent dispenser drawer slightly open to allow it to dry.

Rinse out fluff programme
During drying, fluff is developed and can collect in the drum and suds container.
The *Rinse out fluff* programme must not be used for rinsing laundry.

- Turn the programme selector to the *Rinse out fluff* programme.
- Do not use detergent.
- Touch the *Start/Add laundry* sensor. Any fluff will be rinsed away within a few minutes.
- If necessary, wipe any remaining fluff off the door seal and door glass.
- Switch the washer-dryer off.

4. Selecting programme settings

- Select the desired temperature, spin speed and drying level.

 The sensors for the selected settings light up brightly.

- Select Extras as required.
- Select a Delay start time if required.

5. Adding detergent

- Dispense detergent with CapDosing or via the detergent dispenser drawer.

6. Programme start/finish

- Touch the flashing *Start/Add laundry* sensor. The door will lock. The programme will start. The Anti-crease phase will start at the end of the programme.
- Touch the *Start/Add laundry* sensor or turn the programme selector to the ☐ position. The door will unlock.

 If you have unloaded the drum during the Anti-crease phase, make sure you spread out the laundry to cool it down.

- Pull the door open and unload the drum.

 See "After each washing or drying programme".

Do not exceed the maximum load for the drying programme.
It is very important to read the sections "Separate washing" and "Separate drying" before proceeding.

1. Preparing the laundry

- Sort the laundry according to the type of fibre and weave, garment care label symbol and the drying level required.

2. Loading the drum

- Open the door.
- Unfold the laundry and load loosely in the drum.

 Detergent dispensing aids, e.g. plastic dispenser balls, can melt during the drying programme and cause damage to the machine and the laundry. These dispensing aids must be removed from the laundry before drying.

- Close the door.

 When closing the door, make sure that laundry does not get trapped in the door opening.

3. Selecting a programme

- Turn the programme selector and select the required programme. The control panel lights up.
- Touch the *Washing* and *Drying* sensors until both sensors are brightly lit up.

Washing and drying in one continuous sequence

Extras