

Quick Start Guide Built-in coffee machine



These short instructions are not a substitute for the Operating and installation instructions booklet supplied with your coffee machine. Please read the Operating and installation instructions booklet supplied with your machine before using it for the first time and take note of the Warning and Safety instructions, as well as the full descriptions on how to use your machine.

Settings

Changing settings

- Select "Settings" in the main menu.
- Touch the option you want and change the setting as required.

- Touch "OK" to save the setting.
- Tip:** Touching takes you back to the previous menu.

Menu option	Available settings	Notes
Language	deutsch, and other languages Country	Tip: If you select the wrong language by mistake, you can find the "Language" option by following the flag symbol .
Time of day	Display (Off / On / Night dimming) Clock type (Analogue / Digital) Clock format (12 h / 24 h) Set	Depending on which option you select, the machine may use more energy. A message appears in the display to inform you of this.
Date	Year / Month / Day	
Timer	Timer 1 (Switch on at / Switch off at / Switch off after) Timer 2 (Switch on at / Switch off at)	For "Switch on at" and "Switch off at" to be set, the timer must be activated and at least one day of the week must be allocated.
Eco mode	On / Off	
Lighting	Brightness (Appliance switched on or switched off) Switch off after	
Start screen	Main menu Drinks menu User profiles MyMiele	
Info		Number of drinks "No. of portions until appliance needs descaling" / "No. of portions until brew unit needs degreasing"
System lock	On / Off	When the system lock is activated, the "Switch on at" option for the timer cannot be selected.
Water hardness	Soft / Medium / Hard / Very hard	
Display brightness	Set	
Volume	Buzzer tones Keypad tone	
Showroom programme	Demo mode (On / Off)	This function is intended for presenting the appliance in Miele Centers or retail stores. Do not activate this function for domestic use.
Plate warmer	Automatic / On / Off	
Spout adjustment	On / Off	The height of the central spout cannot be manually adjusted.
Factory default settings	Settings MyMiele	Please note that the following settings will not be reset: Language, Time of day, Number of drinks dispensed, User profiles
Mains water	On / Off	(Only for CVA 6805)

SPECIAL INSTRUCTIONS

SETTINGS

fold here

fold here

Creating a drink

- Touch "Create drink" and select the required drink from the standard drinks.
- Change the drink parameters according to your tastes. Save the quantities of the individual drink components.

The editor will open in the display.
Enter a name for the new drink and touch "Save".

If you have already allocated a drink, you can:

- Change drink
- Delete drink

You can save a maximum of 9 drinks in a profile.

MyMiele

You can display drinks you make frequently, drinks from User profiles and maintenance programmes in the MyMiele screen.

Opening the MyMiele menu

- Touch "MyMiele" in the main menu. You can now configure "MyMiele" and add entries ("Add entry").

Adding an entry

You can select options listed in the following categories:

- Drinks
- User Profiles
- Maintenance
- Touch "Add entry".

If you have already added some entries, you can carry out the following under "Edit":

- Sort entries, or
- Delete entries.

fold here

fold here

Special instructions

Changing the portion size or drink parameters

The changed portion sizes or parameters are always saved in the current User profile. The name of the current User profile appears in the top left of the display.

You are in the drinks menu.

- Place the desired cup under the central spout.
- Select "Edit" and "Change drink".

- Swipe across the display until the option you want appears, then touch it to select it.

Now you can "Change the portion size" or adjust the "Drink parameters".

Changing the portion size

- Touch "Change the portion size".

The drink will be prepared and "Save" will appear in the display.

- When the cup is filled up to the level you want, touch "Save".

If you want to change portion sizes for Cappuccino, Latte macchiato or Caffè latte, the components will be shown in the display.

- Touch the components, whose portion size you want to change.

The tick will show you which components are selected.

- Touch "OK".

When the quantity for each component reaches the level you want, touch "Save".

- Save the required portion size for the selected components.

The combination programmed in and the total portion size will now be dispensed every time that particular drink is selected.

Tip: You can cancel portion size programming while "Stop" is visible in the display.

Adjusting drink parameters

- Touch "Drink parameters".

You can adjust the following parameters:

- Amount of coffee
- Brewing temperature
- Pre-brewing

- Touch "OK" when you have adjusted drink parameters according to your tastes.

Resetting drink settings

To reset drink portions and parameters for all drinks to the factory default settings,

- select "Edit" in the drinks menu and then "Reset drinks".

"Reset all drinks to default settings?" will appear in the display.

- Touch "Yes".

User profiles

You can set up individual User profiles and save individual portion sizes for all drinks for each profile.

The name of the current User profile is shown in the top left of the display.

Calling up User profiles

- Touch "User profiles" in the main menu or select "User profiles" in the drinks menu.

Creating a User profile

- Touch "Create profile".

The editor will open in the display.

- Select the name you want using the keyboard and touch "OK".

If you have allocated a profile in addition to the Miele standard profile, you have the option to:

- Select profile
- Change name
- Delete profile
- Change profile

(You can choose whether User profiles are changed manually, after a drink is dispensed, or when the machine is switched on.)

Editing drinks for User profiles

You can create your own drinks for each User profile and for each drink you can adjust the portion size and other parameters, e.g. amount of coffee, temperature.

You can assign names to different drinks within a User profile.

- Select the User profile you want.

fold here

fold here

Descaling

Descaling **must be carried out** and takes approx. 20 minutes.


- You will need 2 Miele descaling tablets.

The cleaning process cannot be cancelled once it has started. It must be completed through to the end.

- Touch "Maintenance" in the main menu and then "Descalce appliance".

The descaling programme will begin.

- Follow the instructions in the display.

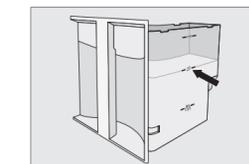

- Fill the water container to the marker with lukewarm water and drop two descaling tablets in the water. Push the water container back into the machine.

Ensure that you adhere to the mixing ratio for the descaling tablets. It is important that you do not fill the water container with more or less water than prescribed. The descaling programme will otherwise be cancelled prematurely and will need to be repeated.

When "Rinse the water container and fill with fresh tap water up to the symbol" appears in the display:

- Remove the water container and rinse it carefully with clean water.

Ensure that no descaling solution residue remains in the water container.

The descaling programme is finished when "Process finished" appears in the display.

fold here

CLEANING AND CARE / DESCALING

Cleaning and care

Cleaning the milk pipework

The milk pipework **must** be cleaned with the Original Miele cleaning agent for milk pipework. Cleaning takes approx. 7 minutes.

You need **one** sachet of the cleaning agent for milk pipework.

The cleaning process cannot be cancelled once it has started. It must be completed through to the end.

- Select "Maintenance" in the main menu and then "Clean the milk pipework". The cleaning process will start.

- Follow the instructions in the display.



- Fill the water container with lukewarm water up to the level marker and add 1 sachet of the Original Miele cleaning agent for milk pipework. Push the water container back into the machine.

When "Rinse and refill the water container" appears in the display:

- Remove the water container and rinse it carefully with clean water.

Ensure that no cleaning agent is left in the water container.

The cleaning process is finished when "Process finished" appears in the display.

fold here

Degreasing the brew unit

After 200 portions have been dispensed, "Degrease the brew unit" will appear in the display. This message will not go out until the brew unit has been degreased.

You need 1 Miele cleaning tablet to degrease the brew unit. The process takes approx. 10 minutes.


The cleaning process cannot be cancelled once it has started. It must be completed through to the end.

- Touch "Maintenance" in the main menu and then "Degrease the brew unit".

The process will start.

- Follow the instructions in the display.

When "Place a cleaning tablet in the ground coffee chute and close the chute" appears in the display:

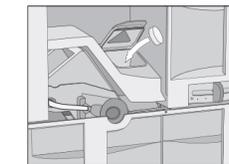

- Remove the coffee chute cover and open the lid of the coffee chute. Place a cleaning tablet in the coffee chute.

- Follow the further instructions given in the display.

The degreasing process is finished when "Process finished" appears in the display.

fold here

fold here

fold here

Important information

Using for the first time

⚠ The coffee machine must be built in and connected to the mains electricity supply before operating. Please refer to the separate Operating and installation instructions booklet.

- Clean the appliance and the milk flask thoroughly before filling with water and coffee beans.
- See "Setting up and using the coffee machine" in the Operating and installation instructions.

Water hardness


Programme the coffee machine to the water hardness level of your area so that it functions correctly and does not get damaged. Please refer to the Operating and installation instructions for more detailed information.

Controls and display

Sensors

On/Off sensor ①	For switching appliance on and off
"Back" ⬅	For returning to the previous menu, cancelling unwanted actions

Touch display

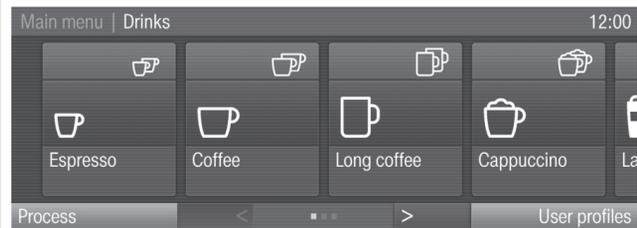

Selecting or calling up a menu	<ul style="list-style-type: none"> ■ Touch the field you want to select it.
Scrolling through menus	<ul style="list-style-type: none"> ■ Swipe the screen, i.e. place your finger on the Touch display and swipe it in the direction you want. ■ Or: Using your finger, touch the arrows < und > to scroll left or right.
Exiting a menu	<ul style="list-style-type: none"> ■ Touch ⓪. <p>All selected entries which have not been confirmed with "OK" will not be saved.</p>
Entering numbers	<p>You can enter numbers by scrolling through and touching the roller, or by using the numerical keypad.</p> <p>Number roller:</p> <ul style="list-style-type: none"> ■ Swipe the roller up or down to select the number you want. <p>Numerical keypad:</p> <ul style="list-style-type: none"> ■ Touch in the bottom right of the input field. <p>The numerical keypad appears.</p> <ul style="list-style-type: none"> ■ Touch the required numbers. <p>Once you have entered an accepted value, "OK" will light up green.</p> <ul style="list-style-type: none"> ■ Use the arrow to delete the last entered number. ■ Touch "OK".
Entering letters	<p>You can enter names for your own User programmes or drinks using a keyboard. Try to use short, concise names.</p> <ul style="list-style-type: none"> ■ Touch the required letters or characters. ■ Touch "Save".



Guide to the appliance

Exterior view

- On/Off sensor ①
- Touch display
- "Back" ⬅ sensor
- Door handle
- Steam and hot water spout
- Drip tray cover
- Automatic height-adjustable central spout with lighting
- Milk flask with lid

Interior view


- Ground coffee chute cover
- Brew unit
- Ground coffee chute
- Slide control for the grinder setting
- Coffee bean container
- Water container
- Drip tray with grid
- Waste container
- Drip tray inside machine door
- Central spout connector
- Service flap

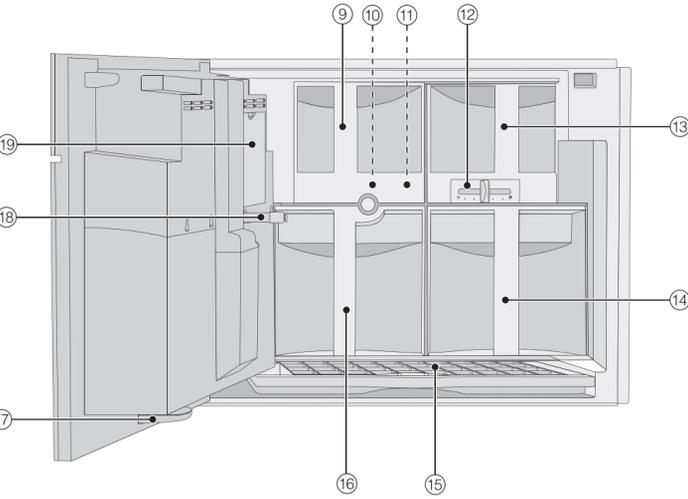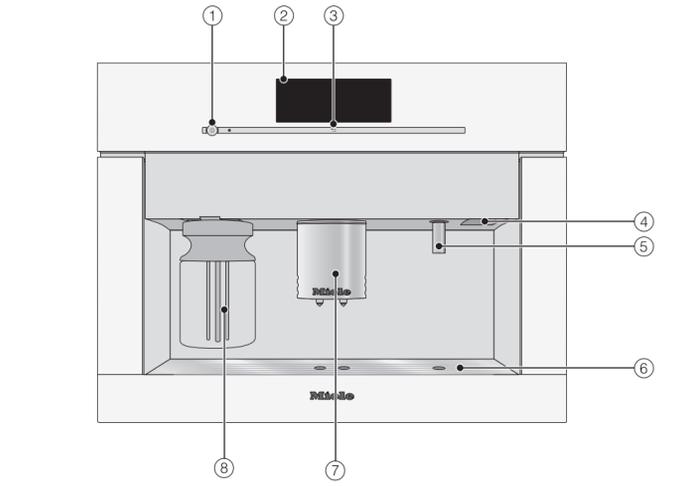

Preparation

Filling the water container


Change the water every day to prevent a build-up of bacteria.

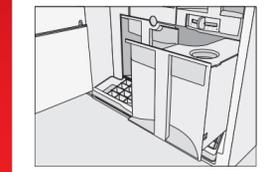

- Fill the water container with fresh, cold tap water up to the "max." marker.

Filling the coffee bean container

Important! Only fill the bean container with roasted espresso or coffee beans.

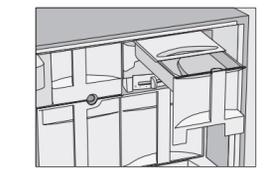

- Open the appliance door and remove the water container.
- Fill the container with roasted coffee beans.

Making drinks

Making espresso or coffee

- Place a cup under the central spout.
- Touch the field for the required drink:
 - ☐ Espresso
 - ☐ Coffee
 - ☐ Long coffee

The coffee or espresso will be dispensed from the central spout into the cup.

Preparing a double portion

To fill two cups at the same time:



- Place one cup under each of the coffee spouts.
- Touch the double symbol for the required drink.

Two portions of the desired drink will be dispensed from the central spout.


Cancelling preparation

- To cancel preparation:
- Touch "Cancel" or "Stop".

Drinks with milk


Notes on the milk flask

Milk is not cooled in the milk flask. Therefore, place the milk flask in the refrigerator if you are not going to use milk for a while. Cold milk (below 13 °C) gives the best results for milk froth.

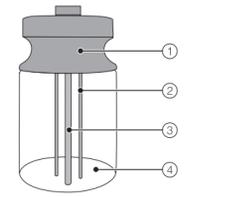

- Lid
- Milk sensor
- Milk suction tube
- Glass milk flask

- Fill the milk flask up to max. 2 cm below the rim. Seal the milk flask with the lid.

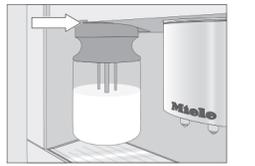

- Push the milk flask into the coffee machine.

Preparing drinks with milk

- Place a suitable vessel underneath the central spout.
- Touch the drink you want to select it:

- ☐ Cappuccino
- ☐ Latte macchiato
- ☐ Caffè latte
- ☐ Hot milk
- ☐ Milk froth

The coffee machine will now prepare the desired drink.

Preparing hot water

Please note that the water prepared by the machine is not boiling and is therefore not suitable for preparing tea.

- Place a suitable vessel underneath the hot water spout.
 - Select "Hot water" ⌵.
- Hot water will be dispensed into the vessel under the hot water spout.

To cancel preparation:

- Touch "Cancel" or "Stop".

Cleaning and care

Please refer to the Operating and installation instructions for more detailed information on cleaning and care. Clean the coffee machine every day to avoid a build-up of bacteria.

Recommended time interval	What do I need to clean?
Every day (at the end of the day)	<ul style="list-style-type: none"> - Milk flask with lid - Water container - Waste container - Drip tray and drip tray cover
Once a week (or more often if necessary)	<ul style="list-style-type: none"> - Central spout - Central spout connector - Clean the milk valve with the cleaning brush - Interior - Small drip tray inside the machine door - Brew unit - Appliance front (especially important straight after descaling)
Once a month	<ul style="list-style-type: none"> - Lubricate the cap on the central spout connector
When prompted	<ul style="list-style-type: none"> - Milk pipework (with the Original Miele cleaning agent for milk pipework) - Brew unit (with cleaning tablets) - Descale the machine when prompted to do so
As required	<ul style="list-style-type: none"> - Coffee bean container - Clean the milk pipework of any blockages

The following parts must not be cleaned in a dishwasher:

- Central spout cover
- Brew unit
- Coffee bean container and lid
- Service flap

All other removable parts can be cleaned in a dishwasher.