


Miele

Operating and installation instructions

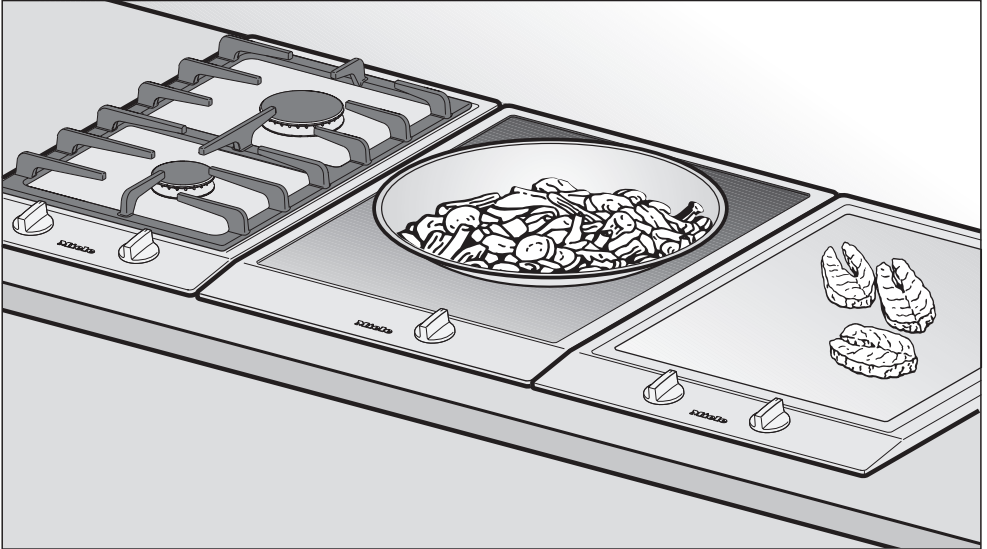

Gas hob CS 1013-1

To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

en - HK, ZA

M.-Nr. 09 029 800

-
- GB** This appliance can be used in countries other than those specified on the appliance. It is, however, set up for connection to the gas and electricity supplies in the countries specified. For use in other countries please contact the Miele spare parts or customer service department in your country.
- D** Das Gerät ist auch für den Gebrauch in anderen als auf dem Gerät angegebenen Bestimmungsländer zugelassen. Die landesspezifische Ausführung und die Anschlussart des Gerätes haben wesentlichen Einfluss auf den einwandfreien und sicheren Betrieb. Für den Betrieb in einem anderen als auf dem Gerät angegebenen Bestimmungsland wenden Sie sich bitte an den für das Land zuständigen Kundendienst.
- E** El aparato está autorizado para el uso en países diferentes a los países de destino indicados. La ejecución específica para cada país y el tipo de conexión del aparato influyen de forma decisiva en el funcionamiento correcto y seguro. Para el funcionamiento en un país diferente al país de destino indicado en el aparato, consulte al Servicio Post-venta autorizado para el país.
- F** Cet appareil est également homologué dans des pays différents de ceux mentionnés sur l'appareil. Pour que l'appareil fonctionne parfaitement et en toute sécurité, il est important de disposer de l'exécution spécifique au pays et du type de raccordement approprié. Pour le fonctionnement dans un pays autre que celui spécifié sur l'appareil, veuillez vous adresser au service après-vente du pays où sera installé l'appareil.
- I** L'apparecchio può essere usato anche in paesi diversi da quello indicato sull'apparecchio stesso. Tuttavia, le varianti specifiche di un determinato paese e il tipo di allacciamento alla rete hanno un'importanza fondamentale per il suo sicuro e corretto funzionamento. Per questo se si vuole usare l'apparecchio in un paese diverso rivolgersi al servizio di assistenza tecnica Miele del paese in cui si intende usarlo.
- NL** Het apparaat is ook toegelaten voor gebruik in andere landen dan de landen die op het apparaat vermeld staan. De specifieke uitvoering en de aansluitwijze zijn van groot belang voor het goed en veilig functioneren. Neem daarom contact op met de Technische Dienst van de fabrikant in uw land als u het apparaat in een land wilt gebruiken dat niet op het apparaat vermeld staat.

Gas-heated appliances


Safety precautions to take if you smell gas

- Turn off the gas emergency control valve immediately.
This is usually located near the gas meter.
- Eliminate all sources of ignition in a safe manner.
Do not smoke, light cigarette lighters or matches.
- Do not operate electrical lights or switches, i.e. do not switch them "On" or "Off".
- Open all doors and windows to ventilate the area.
- If the smell of gas persists, evacuate the building.

Inhalt

Guide to the appliance	5
Warning and Safety instructions	7
Caring for the environment	13
Before using for the first time	14
Operation	15
Switching on, adjusting the flame and switching off	15
Pans	17
Safety	18
Cleaning and care	19
General notes	19
Stainless steel surfaces	20
Pan supports, control knobs	20
Burner	21
Problem solving guide	22
Optional accessories	23
Safety instructions for installation	24
Appliance and building-in dimensions	28
Preparing the worktop	29
Installation of several appliances	30
Fixing the spring clamps and spacer bars	33
Installing / removing the appliance	35
General installation tips	36
Electrical connection	37
Gas connection	39
LPG Gas Connection for HK	40
LPG Gas Connection for SG	40
Conversion to another type of gas	43
Jet table	43
Changing the jets	44
After changing the jets	45
After sales service, data plate	46
Technical Data	47

Front view

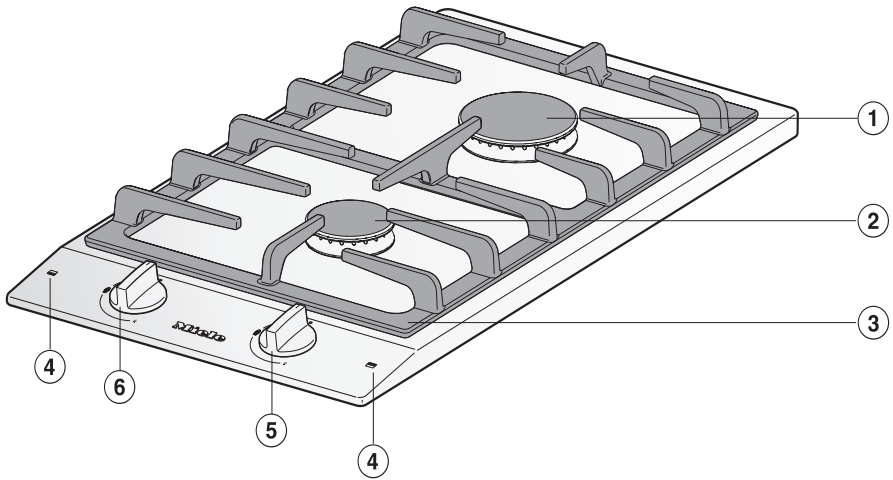


- ① Large burner
- ② Normal burner
- ③ Pan support
- ④ Symbols to indicate which gas burner the control is for

Controls:

- ⑤ rear
- ⑥ front

Guide to the appliance

Burner

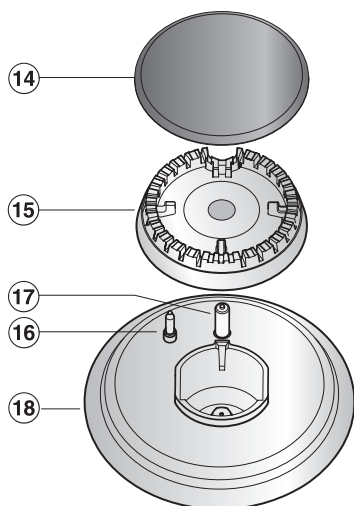

- ⑭ Burner cap
- ⑮ Burner head
- ⑯ Ignitor
- ⑰ Ignition safety device
- ⑱ Burner base

Warning and Safety instructions

This appliance complies with all current local and national safety requirements. Improper use can, however, present a risk of both personal injury and material damage.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before installation and before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

Correct application

▶ This hob is not designed for commercial use. It is intended for use in domestic households and in similar working and residential environments such as:

- Shops
- Offices and showrooms

and by residents in establishments such as:

- Hostels and guest houses.

▶ The hob is intended for domestic use only to cook food and keep it warm. Any other use is not supported by the manufacturer and could be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.

▶ The hob is not intended for outdoor use.

▶ The hob can only be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised whilst using it, or have been shown how to use it in a safe way and understand the hazards involved.

Warning and Safety instructions

Safety with children

- ▶ The hob is not a toy! To prevent the risk of injury, do not let children play with the appliance or its controls.
- ▶ Children under 8 years of age must be kept away from the hob unless they are constantly supervised.
- ▶ Children 8 years and older may use the hob only if they have been shown how to use it in a safe way and understand the hazards involved.
- ▶ The hob gets hot when in use and remains hot for quite a while after being switched off. Keep children well away from the appliance until it has cooled down and there is no danger of burning.
- ▶ Do not store anything which might arouse a child's interest in storage areas above or next to the hob. Otherwise they could be tempted into climbing onto the appliance with the risk of burning themselves.
- ▶ Keep all pans out of reach of children. Turn pan handles inwards away from the edge of the hob. Danger of burning or scalding.
- ▶ Packaging, e.g. cling film, polystyrene and plastic wrappings, must be kept out of the reach of babies and young children. Danger of suffocation. Dispose of or recycle all packaging safely as soon as possible.

Warning and Safety instructions

Technical safety

▶ Before installation, check the hob for visible signs of damage. Do not install and use a damaged appliance. It could be dangerous.

▶ The electrical safety of the hob can only be guaranteed if correctly earthed. It is most important that this basic safety requirement is observed and regularly tested, and where there is any doubt, the household wiring system should be inspected by a qualified electrician.

Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

▶ Before connecting the hob to the mains electricity supply, make sure that the data quoted on the data plate match the household mains supply, otherwise the appliance could be damaged. Consult a qualified electrician if in any doubt.

▶ For safety reasons, the hob may only be used after it has been built in.

▶ Do not open the casing of the hob. Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.

▶ The connection to the gas supply should only be undertaken by an registered gas installer under the gas safety regulations (Registration of Gas Installers and Gas Contractors). If the appliance is supplied without a plug, or if the plug is removed, it must be connected to the mains electricity supply by a suitably qualified and competent electrician in strict accordance with current local and national safety regulations. The manufacturer cannot be held liable for damage caused by incorrect installation or connection.

▶ Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

▶ During installation, maintenance and repair work, the hob must be disconnected from the gas supply and mains electricity supply.

▶ While the hob is under guarantee, repairs should only be undertaken by a service technician authorised by Miele. Otherwise the guarantee is invalidated.

Warning and Safety instructions

▶ Faulty components must only be replaced by genuine Miele original spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.

▶ If the connection cable is damaged, it must be replaced by a suitably qualified electrician with a special connection cable of type H 05 V V-F (pvc insulated), available from Miele.

▶ The hob is not intended for use with an external timer switch or a remote control system.

▶ Do not connect the hob to the mains electricity supply by a multi-socket adapter or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).

▶ Do not use the hob if it is faulty. Switch it off immediately and disconnect it from the mains electricity supply and the gas supply. Call the Service Department.

Correct use

▶ The hob gets hot when in use and remains hot for quite a while after being switched off. Do not touch it whilst it could still be hot.

▶ If a cooker hood is installed above the hob, ensure that the burners are always covered with a pan when in use. Otherwise flames could reach the cooker hood, parts of which could then be damaged or set on fire.

▶ Do not leave the hob unattended whilst it is being used. Oil and fat are potential fire hazards as they can ignite if overheated.

▶ If oil or fat does catch fire, do not attempt to put out the flames with water. Use a suitable fire blanket, saucepan lid, damp towel or similar to smother the flames.

▶ Do not use the hob to heat up the room. Due to the high temperatures radiated, objects near the appliance could catch fire. The life of the appliance could also be reduced.

▶ Use heat-resistant pot holders or gloves when using the hob. Ensure that they do not come into contact with the flames. Do not use large cloths, tea towels or similar as the ends could touch the flames and catch fire. Do not let the gloves get damp or wet, as this causes heat to transfer through the material more quickly with the risk of scalding or burning yourself.

▶ Do not flambé under a cooker hood. The flames could set the cooker hood on fire.

▶ Do not use the hob as a resting place for anything. When the appliance is switched on either deliberately or by mistake, or when there is residual heat present, the article could melt or catch fire.

▶ Where several appliances are installed side by side

Do not place hot pots or pans on the cover strip as this can damage the seal.

Warning and Safety instructions

- ▶ Do not cover the hob, e. g. with a hob cover, a cloth or protective foil. The material could catch fire, shatter or melt if the appliance is switched on by mistake or if it is still warm.
- ▶ Do not use plastic or aluminium foil containers. These melt at high temperatures and could catch fire.
- ▶ Do not heat up unopened tins of food on the hob, as pressure will build up in the tin, causing it to explode. This could result in injury and scalding or damage.
- ▶ Make sure all the components of the gas burners have been correctly assembled before switching on.
- ▶ Pans must be the correct size for the burner they are used on (see "Suitable pans"). A pan which is too small will be unstable on the pan support. If the pan diameter is too large, flames can spread out to the sides and damage or burn the worktop, wall claddings or surrounding units and also parts of the hob. Miele cannot be held liable for this type of damage.
- ▶ Ensure that the flames from the burner do not spread out beyond the base and up the sides of the pan.
- ▶ Unless the pan manufacturer states that you can do so, do not use pans with very thin bases on the hob, and never heat up empty pans as they could get damaged. This could also damage the appliance.
- ▶ The pan support supplied must always be used. Pans must not be placed directly on the burner.
- ▶ Do not store any inflammable objects near the hob.
- ▶ Remove splashes of fat and other food debris from the surface as soon as possible. These are a fire hazard.
- ▶ Replace the pan supports carefully to avoid scratching the surface of the hob.
- ▶ Using the hob will cause a build-up of heat and moisture in the room in which it is installed. Ensure that the room has sufficient natural or mechanical means of ventilation, e.g. an extractor.
- ▶ If the hob is used for very long periods of time additional ventilation of the room may be necessary, e.g. by opening windows or doors, or running the extractor on the highest setting.
- ▶ When using an electrical appliance, e.g. a hand-held food blender, near the hob, ensure that the cable of the electrical appliance does not come into contact with the hot hob. The insulation on the cable could become damaged, giving rise to an electric shock hazard.
- ▶ Spray canisters, aerosols and other inflammable substances must not be stored in a drawer under the hob. Cutlery inserts must be heat-resistant.

Warning and Safety instructions

- ▶ Always ensure that food is sufficiently cooked or reheated. Some foods may contain micro-organisms which are only destroyed by thorough cooking at a sufficiently high temperature for long enough. Therefore, when cooking or reheating food such as poultry, it is particularly important that the food is completely cooked through. If in doubt, select a longer cooking or reheating time.
- ▶ Avoid allowing liquids or foods containing salt to spill onto the hob. If salty foods or liquids do get on the hob, they should be removed as soon as possible to avoid the risk of corrosion.
- ▶ If the hob is installed behind a kitchen furniture door, it may only be used with the furniture door open. Only close the door when the appliance is switched off and the residual heat indicators have gone out.
- ▶ If the hob has not been used for a long period of time it should be thoroughly cleaned before it is used again. It is also advisable to have the appliance tested for safety.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.


Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and should be recycled.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

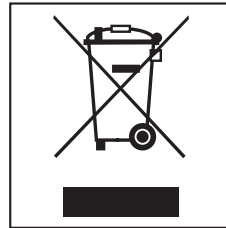

Please dispose of it at your local community waste collection/recycling centre or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

Before using for the first time

Please stick the extra data plate for the appliance supplied with this documentation in the space provided in the "After sales service" section of this booklet.

Cleaning for the first time

- Remove any protective foil and stickers.
- Clean all removable parts of the burners with a solution of warm water and a little washing-up liquid applied with a soft sponge. Dry all parts thoroughly after cleaning and then reassemble the burners (see "Cleaning and care").
- Clean the stainless steel trough with a damp cloth, and then wipe dry.

Metal components have a protective coating which may give off a slight smell when heated up for the first time. The smell and any vapours will dissipate after a short time, and do not indicate a faulty connection or appliance.

Switching on, adjusting the flame and switching off

The control knob is used to ignite the burner and regulate the strength of the flame.

- The gas supply is turned off

🔥 strong flame

🔥 weak flame

The burners can only be switched on by pressing in the appropriate control and turning it anti-clockwise, and switched off by turning the control clockwise.


The following will cause damage to the appliance:

- Switching on the burner without pressing the control down,
- Switching the burner on by turning the control clockwise,
- Switching the burner off by turning the control anti-clockwise.

The manufacturer will not accept liability for any damaging resulting from incorrect operation.

Operation

Switching on

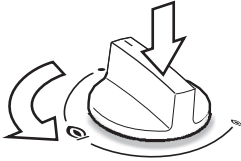

- The control for the burner required must be pressed in and turned anti-clockwise to the large flame symbol to switch on.
- When the flame ignites, keep the control pressed in for 8-10 seconds, and then let it go.

Do not press the control knob for more than 15 seconds. If the burner does not ignite within these 15 seconds, release the control knob and open the door or wait for at least 1 minute before making a new ignition attempt.

In the event of the burner flames being accidentally extinguished, turn off the burner control and do not attempt to re-ignite the burner for at least 1 min.

In the event of a power cut

 
If there is an interruption to the electricity supply the gas can be ignited with a match:

- Press in the relevant control and turn it anti-clockwise to the large gas symbol.
- Hold the control pressed in and light the gas at the burner with a match.

- Keep the control pressed in for a further 8-10 seconds and then release it.

Regulating the flame

The burners can be regulated at any level between the strongest and weakest flame.



Control the flame so that it does not spread out beyond the sides of the pan. As the outer part of the flame is much hotter than the centre, the tips of the flames should stay beneath the pan base. Flame tips which extend beyond the sides of the pan merely warm up the air in the room and can also damage pan handles and increase the risk of injury.


Switching off

- Turn the control clockwise to position "●".

This stops the flow of gas and the flame goes out.

Burner	Min. pan base diameter in cm
Normal burner	12
Large burner	14
	Max. diameter at top of pan in cm
Normal burner	22
Large burner	24

- Select pans which are suitable for the burner they are to be used on. In general: use larger diameter pans on the large burners, and smaller diameter pans on the small burners.

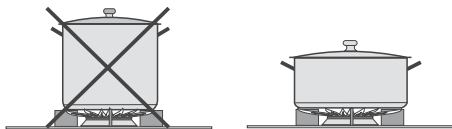

- Wide, shallow pans are preferable to tall, narrow ones. They will heat up faster.
- Pans with thick bases are preferable as these distribute heat more evenly. With thin bases, there is a danger of food overheating in places. Stir the food frequently.
- Any heat-resistant pans can be used on a gas burner.
- Remember when purchasing new pans that manufacturers usually refer to the diameter at the top of the pan in their documentation.

- Refer to the chart above and ensure that the pan diameter falls within the minimum and maximum diameters given for the burner you are using. A pan which is too small will be unstable on the pan support. If the pan diameter is too large, flames can spread out to the sides and damage or burn the worktop, wall claddings or surrounding units and also parts of the hob. The manufacturer cannot be held liable for this type of damage.
- Use a lid whenever possible to minimise heat loss.

Safety


Thermo-electric ignition

This appliance has a thermo-electric ignition safety device. If the flame goes out, for example if food has boiled over or if there is a sudden draught, the supply of gas to the burner will be cut off.

- To use the burner again, turn the control clockwise to the "●" position, and then switch it back on as normal.

The safety cut-out operates independently from the electricity supply. This means that it will still work if the hob is used during a power cut.

General notes

 Under no circumstances use a steam cleaning appliance to clean this appliance. The steam could attack the electrical components and cause a short circuit. Pressurised steam could also cause permanent damage to the surface and to other components, for which the manufacturer cannot accept liability.

The appliance should be cleaned after each use. Let it cool down to room temperature.

To avoid water marks and limescale deposits use a soft cloth to dry surfaces that have been cleaned with water.

Thoroughly remove salty food residues or liquids from the hob as soon as possible to avoid the risk of corrosion.

To avoid damaging the surface or your hob, do not use:

- cleaning agents containing soda, alkalines, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- stain or rust removers,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- dishwasher cleaner,
- grill and oven cleaners,
- glass cleaning agents,
- hard, abrasive brushes or sponges, e.g. pot scourers, brushes or sponges which have been previously used with abrasive cleaning agents,
- sharp pointed objects (these can damage the seal between the frame and the worktop)

Cleaning and care

Stainless steel surfaces

Clean stainless steel surfaces with a solution of warm water and a little washing-up liquid applied with a soft sponge. In the case of stubborn dried-on soiling, soak first. Finally, dry with a soft cloth.

If necessary a cleaning agent for ceramic and stainless steel surfaces can be used (see "Optional accessories"). Apply with even pressure following the direction of the "grain".

Do not use stainless steel cleaning agents on **printed** surfaces. This would rub off the print. These areas should be only cleaned with a solution of warm water and a little washing-up liquid applied with a soft sponge.

A conditioning agent for stainless steel can be used after cleaning to help keep your appliance looking good (see "Optional accessories").

Apply sparingly with a soft cloth following the instructions on the packaging.

Pan supports, control knobs

Remove the pan supports. Clean the pan supports and the control knobs with a solution of warm water and a little washing-up liquid applied with a soft sponge. Stubborn soiling should be soaked first.

After cleaning dry all surfaces with a clean cloth.

Do not clean the pan supports in a dishwasher.

Burner

Do not clean any parts of the burner in a dishwasher.

The burner should be dismantled and then cleaned by hand using a solution of warm water and a little washing-up liquid applied with a soft sponge.

Parts of the burner that cannot be removed should be wiped clean with a damp cloth only.

The ignitor and ignition safety device should be very carefully wiped clean using a well wrung out cloth.


Do not let the ignitor get wet. If it gets wet it will not spark.

After cleaning dry all surfaces with a clean cloth.

Make sure that the flame slits are clean and completely dry.

The surfaces of the two burner caps will become more matt with time. This is quite normal and will not affect the operation of the hob.


Reassemble the burner

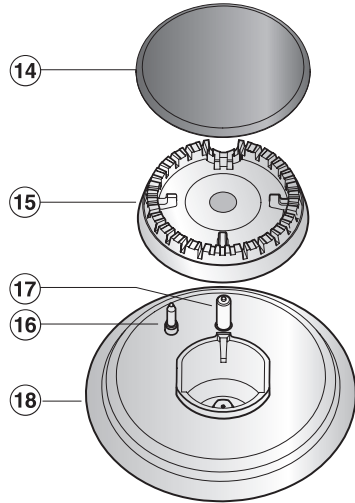

After cleaning the burner it must be reassembled in the correct order.

- Place the burner head (15) on to the burner base (18) so that the the ignitor (16) and the ignition safety device (17) extend through their respective holes in the burner head. The burner head must click into place correctly.
- Place burner cap (14) flat over burner head (15). When correctly positioned it will not slide about.

Problem solving guide

 Repairs to the gas and electrical components of this appliance must only be carried out by a suitably qualified and competent person to ensure safety. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

What to do if...

... the burner does not ignite after several attempts.

Check whether

- the burner is correctly assembled.
- the gas supply tap is turned on.
- the burner is dry and clean.
- the flame slits are dry and unblocked.

... the gas flame goes out after being lit.

During the ignition process, the flames need to touch the ignition safety device so that it heats up.

If the flames do not touch the ignition safety device, check that

- the burner cover is correctly in position.
- there is no soiling on the ignition safety device. If there is, remove it carefully (see "Cleaning and care").

.... the ignitor on the burner does not spark.

Check whether

- the mains fuse has blown. If it has, contact a qualified electrician or the Miele Customer Contact Centre.
- food deposits have lodged themselves between the ignitor and the burner cap, or on the ignition safety device.
Remove any food deposits carefully (see "Cleaning and care").
- food has adhered to the ignition safety device.
Remove any food deposits carefully (see "Cleaning and care").

... the flame suddenly looks different.

Check that the burner is correctly assembled.

Optional accessories

Miele offer a comprehensive range of useful accessories as well as cleaning and conditioning products for your Miele appliances.

These can be ordered online at:



or from Miele (see back cover for contact details)

Ceramic and stainless steel hob cleaner 250 ml



Removes heavy soiling, limescale deposits and light discolouration

Stainless steel conditioning agent 250 ml



Removes water marks, flecks and finger prints.
Helps keep the hob looking good for longer.

Safety instructions for installation

This appliance must be installed and connected to services in accordance with local and national safety and building regulations.

To avoid the risk of damaging the hob fit the wall units and extractor hood before installing it.

▶ The room in which the gas hob is installed must be at least 20 m³ in size with a door or window in it which can be opened to the outside air.

▶ The veneer or laminate coatings of worktops (or adjacent kitchen units) must be treated with 100 °C heat-resistant adhesive which will not dissolve or distort.
Any backmoulds must be of heat-resistant material.

▶ This appliance must not be used in a non-stationary location (e.g. on a ship).

▶ An electric fryer must not be installed directly next to a gas hob, as the gas flames could ignite the fat in the fryer. It is essential to maintain a distance of at least 288 mm between these two appliances.

▶ A gas hob may not be built in over a fridge, fridge freezer, freezer, dishwasher, washing machine or tumble dryer.

▶ The hob may only be installed above a Miele oven if the worktop is at least 40 mm thick.

▶ Ensure that the gas pipe and electrical cable are installed in such a way that they do not touch any parts of the appliance which become hot. This could cause damage.


▶ The electrical cable and any flexible gas connection pipes must be installed in such a way so that they do not come into contact with any moving kitchen parts (e.g. a drawer), and cannot become trapped.

▶ Observe carefully the safety distances given on the following pages.

All dimensions in this instruction booklet are given in mm.

Safety instructions for installation

Safety distance above the appliance

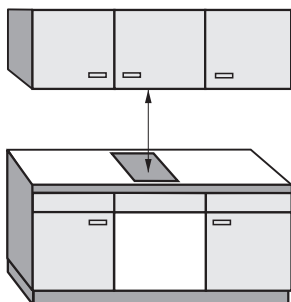

A minimum safety distance must be maintained between the appliance and the cooker hood above it. See the cooker hood manufacturer's operating and installation instructions for details.

If the manufacturer's instructions are not available for the cooker hood, a minimum safety distance of at least 760 mm must be maintained. For any flammable objects, e.g. utensil rails, wall units etc. a minimum distance of at least 760 mm must be maintained between them and the appliance below.

When two or more appliances are installed together below a cooker hood, e.g. an electric hob and a gas wok combiset, which have different safety distances given in their installation instructions you should select the greater distance of the two.

Safety Distance below the Hob

There should be at least 30 mm height or plenty of space reserved at the bottom of the gas hob for the installation of the flexible gas connection pipe and electrical cable. It also avoids any possible hindrance towards the movement of all moveable kitchen parts (e.g. drawer).

Safety instructions for installation

Safety distances to the sides of the hob

Ideally the hob should be installed with plenty of space on either side. There may be a wall at the rear and a tall unit or wall at one side. On the other side, however, no unit or divider should stand higher than the hob (see illustrations).

Due to the high temperatures radiated by the hob, it is essential that a minimum distance of **50 mm** is maintained between the worktop cut-out and the back wall.

The minimum distance ① between the worktop cut-out and a wall or tall unit to the right or left of it is:

40 mm for CS 1212 / CS 1212-1
CS 1221
CS 1234 / CS 1234-1
CS 1223


50 mm for CS 1112
CS 1122
CS 1134
CS 1326 / CS 1327
CS 1411

100 mm for CS 1012 / CS 1012-1
CS 1013 / CS 1013-1


150 mm for CS 1421
CS 1312
CS 1322

200 mm for CS 1034 / CS 1034-1


250 mm for CS 1011
CS 1018
CS 1021
CS 1028

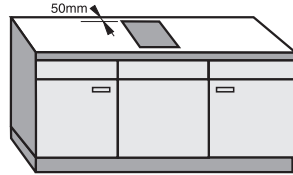

recommended

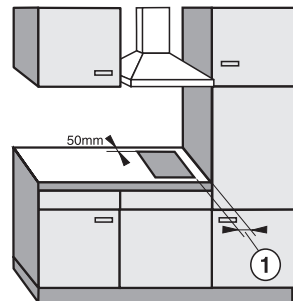

not recommended

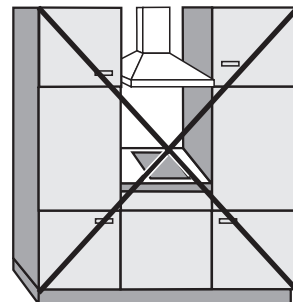

not allowed

Safety instructions for installation

Safety distance when installing the appliance near a wall with additional niche cladding


A minimum safety distance must be maintained between the worktop cut-out and any niche cladding to protect it from heat damage.

If the niche cladding is made from a **combustible material** (e. g. wood) a minimum safety distance ⑤ of 50 mm must be maintained between the cut-out and the cladding.

If the niche cladding is made from a **non-combustible material** (e. g. metal, natural stone, ceramic tiles) a minimum safety distance ⑤ of 50 mm less the thickness of the cladding must be maintained between the cut-out and the cladding.

Example: 15 mm niche cladding

50 mm - 15 mm = minimum safety distance of 35 mm

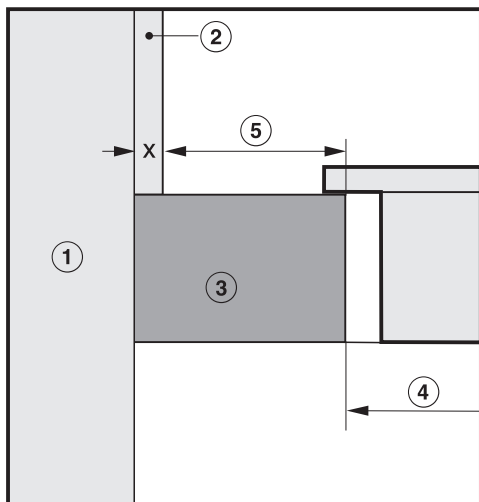

① Masonry

② Niche cladding

Dimension x = thickness of niche cladding material

③ Worktop

④ Worktop cut-out

⑤ Minimum safety distance

for **combustible** materials is 50 mm

for **non-combustible** materials is 50 mm less dimension x


- Make the worktop cut-out for one or more appliances as applicable. Remember to maintain a **minimum safety distance** from the **back wall**, as well as from any **tall unit or side wall** to the right or left of the hob. See "Safety instructions for installation".
- Seal the cut surfaces with a suitable heat-resistant sealant to avoid swelling caused by moisture. The materials used must be heat-resistant.

If, during installation, you find that the seals on the corners of the frame are not flush with the worktop surface, the corner radius ($\leq R4$) can be carefully scribed to fit.

Installation of several appliances


When installing two or more appliances next to each other a spacer bar ② must be used between each one.
See "Fitting the spacer bars and support brackets".

Worktop cut-out - two appliances

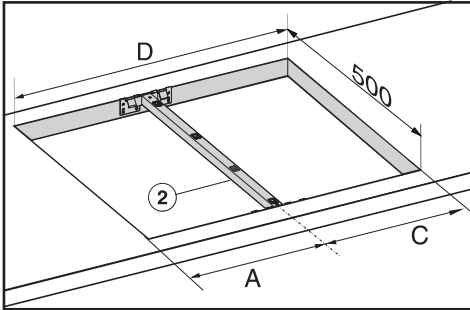

When installing **two appliances**, the width of the cut-out required D is calculated by adding dimensions A and C.

Worktop cut-out - three appliances

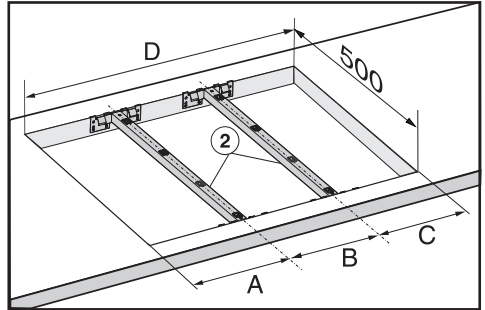

When installing **three appliances** the width of the cut-out required (D) is calculated by adding dimensions A, B and C.

A = appliance width (288 mm or 380 mm or 576 mm) **less 8 mm**

B = appliance width (288 mm or 380 mm or 576 mm)

C = appliance width (288 mm or 380 mm or 576 mm) **less 8 mm**

D = width of worktop cut-out

When installing **more than three appliances** for each additional appliance add the relevant appliance width (288 mm or 380 mm or 576 mm) to dimensions A, B and C.


Installation of several appliances

Worktop cut-out calculation example for three appliances

A Appliance width less 8	B Appliance width	C Appliance width less 8	D Worktop cut-out
280	288	280	848
280	380	372	1032
280	576	568	1424
372	288	280	940
372	380	372	1124
372	576	568	1516
568	288	280	1136
568	380	372	1320
568	-	568	1136

All dimensions are given in mm

Installation of several appliances

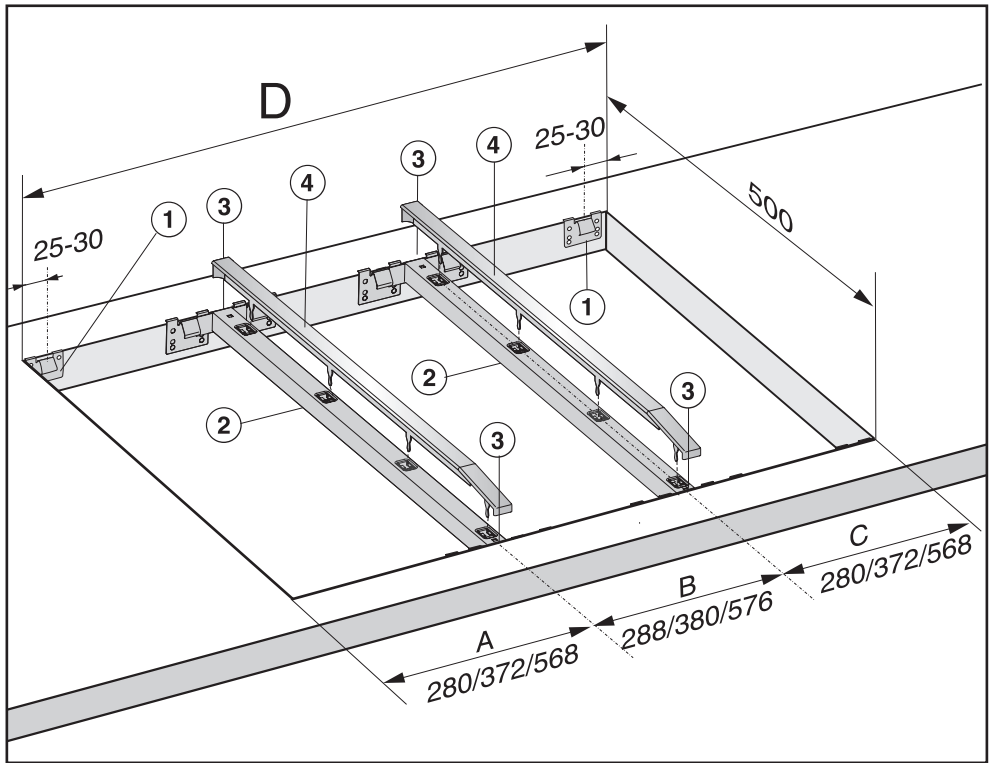



- ① Spring clamps
- ② Spacer bars
- ③ Gap between spacer bar and worktop
- ④ Cover strips

The illustration shows a worktop cut-out with spring clamps ① and spacer bars ② for 3 appliances.

An additional spacer bar is required for each additional appliance. The position for securing each additional spacer bar will depend on the width of appliance **B** (288 mm / 380 mm / 576 mm).

Fixing the spring clamps and spacer bars

Wooden worktops

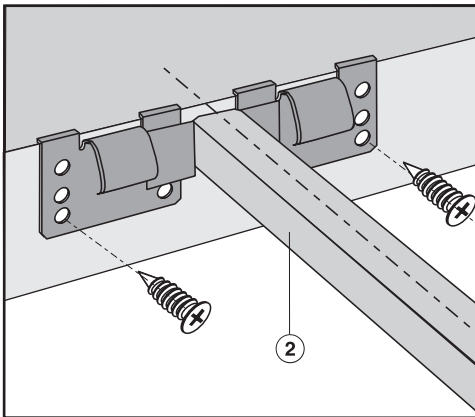
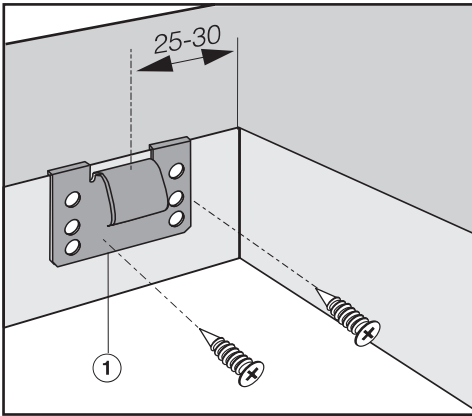


- Position the spring clamps supplied ① and spacer bars ② on the top edge of the cut-out in the positions marked.
- Secure the spring clamps and spacer bars with the 3.5 x 25 mm screws supplied.



Fixing the spring clamps and spacer bars

Granite and marble worktops

The screws are not required for granite or marble worktops.

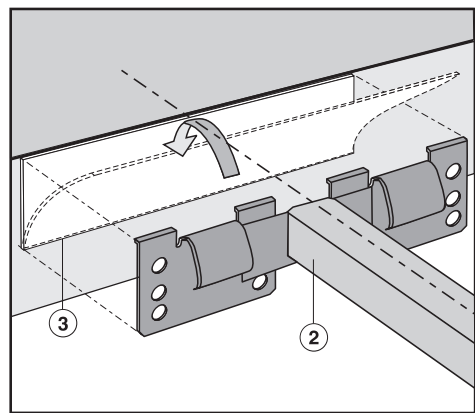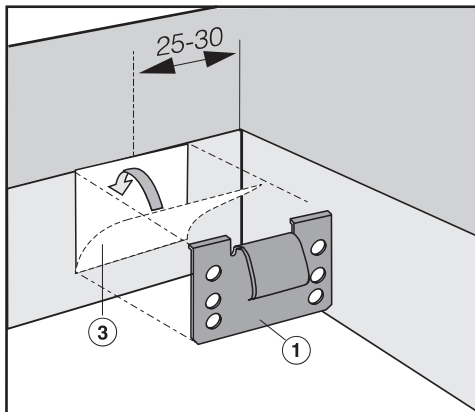

- Position and secure the spring clamps ① and spacer bars ② using strong, double-sided adhesive tape ③.

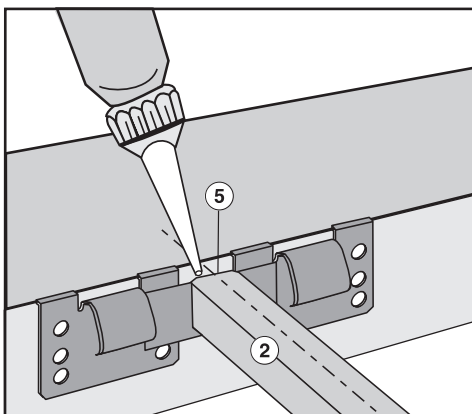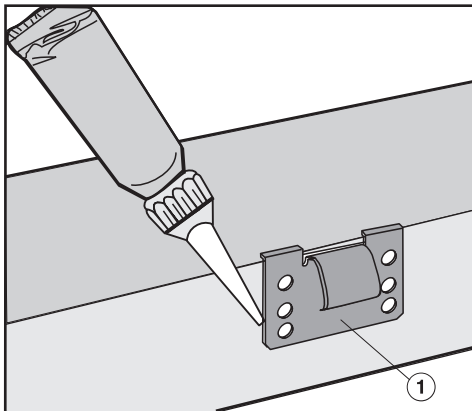


- Apply silicone to the side edges and the lower edges of spring clamps ① and spacer bars ②.
- Then fill gap ⑤ between the spacer bars and the worktop with silicone.

Installing / removing the appliance

Installing the appliance

- Feed the connection cable down through the cut-out.
- Starting at the front, position the appliance in the worktop cut-out.
- Using both hands, press down evenly on the sides of the appliance until it clicks into position. When doing this make sure that the seal under the appliance sits flush with the worktop on all sides. This is important to ensure an effective seal all round. **Do not use sealant.**
- Push the appliance to the side until the holes in the spacer bar can be seen.

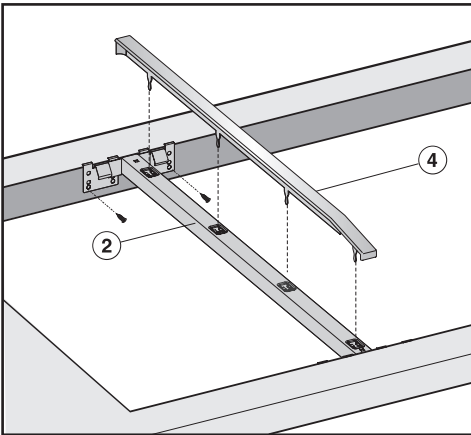

- Fit the cover strip ④ into the holes in the spacer bar ②.

- Starting at the front, position the next appliance in the worktop cut-out.
- Connect the appliance(s) to the mains (see "Electrical connection") and to the gas supply (see "Gas connection").
- Check that the appliance(s) work(s).


Removing the appliance

If the appliance is **accessible underneath**, it can be pushed up out of the cut-out from below. It must be pushed up from the back first.

If the appliance is **not accessible underneath**, take hold of the appliance with both hands at the back, pull it forwards, then lift it up and out.

General installation tips


Seal between the appliance and the worktop

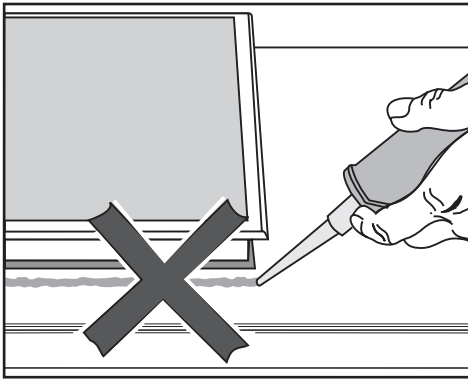

The sealing strip under the edge of the top part of the appliance provides a sufficient seal for the worktop.

The appliance must not be sealed with sealant (e.g. silicone). This could result in damage to the appliance or the worktop if it ever needs to be removed for servicing.

Tiled worktop

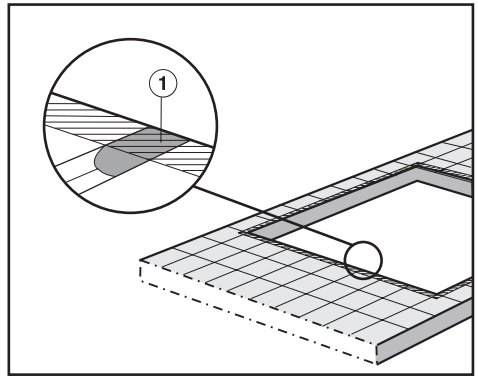

Grout lines ① and the hatched area underneath the surface of the appliance must be smooth and even. If they are not, the appliance will not sit flush with the worktop and the sealing strip underneath the top part of the appliance will not provide a good seal between the appliance and the worktop.

All electrical work should be carried out by a suitably qualified and competent person, in strict accordance with current local and national safety regulations.

Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

The appliance must only be operated when built-in. This is to ensure that all electrical parts are shielded. Live parts must not be exposed.

Do not connect the appliance to the mains electricity supply by an extension lead. These do not guarantee the required safety of the appliance.

Please make sure that the connection data quoted on the data plate match the household mains supply.

Connection should be made via a suitable isolator or a double pole fused spur connection unit which complies with national and local safety regulations and the on/off switch should be easily accessible after the appliance has been built in.

If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to install a suitable residual current device (RCD).

When switched off there must be an all-pole contact gap of 3 mm in the isolator switch (including switch, fuses and relays).

Important

This appliance is supplied for connection to a single phase 230 V 50 Hz supply with a 3-core cable.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral

Brown = live

WARNING
THIS APPLIANCE MUST BE
EARTHED

Electrical connection

Important

The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system, which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and regularly tested and where there is any doubt, the electrical wiring in the home should be tested by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system such as an electric shock.

If the connection cable is damaged, it must be replaced by a suitably qualified electrician with a special connection cable of type H 05 V V-F (pvc insulated), available from the Miele Service Department.

The manufacturer cannot be held liable for damage which is the direct or indirect result of incorrect installation or connection.

Connection to the gas supply, or conversion from one type of gas to another, should only be undertaken by an registered gas installer under the gas safety regulations (Registration of Gas Installers and Gas Contractors).

Only use approved stainless steel braided flexible tubing bearing EMSD Approval marking for connection up to gas supply point.

Every appliance should have its own easily accessible isolating valve.

Safety regulations demand that a pressure test point is installed near a gas hob to allow an engineer to test the pressure, following servicing.

The gas connection must be installed so that connection can be made either from inside or outside the kitchen unit, and the isolating valve must be easily accessible and visible (by opening one of the kitchen unit doors if necessary).

Check with your local gas supplier about the type of gas and its calorific value, and compare this information with the type of gas quoted on the data plate.

The gas installation must be carried out so that the connection is not subject to high temperatures when the appliance is in use.

It is particularly important that the flexible gas connection pipes and isolator valves do not come into contact with hot gas exhaust fumes.

Neither the flexible gas connection pipe nor the electrical cable must come into contact with any parts of the appliance which get hot, as this could damage the flexible gas connection pipe or the electrical cable.

Flexible gas connection pipes and cables must be installed so that they do not impede moving kitchen parts (e.g. drawers), which must be able to move freely without hindrance.

The installer is responsible for ensuring that the appliance functions correctly when installed.

A test for possible leakages must be carried out after installation.

Gas connection

The gas hob is normally suitable for connection to either Town Gas, Natural Gas or Liquid Petroleum Gas.

Depending on your country, the gas hob is supplied ready for connection to Town Gas, Natural Gas or Liquid Petroleum Gas (see label on appliance).

Depending on country, the appropriate set of jets for conversion to an alternative type of gas is included with the hob.

Depending on the country, the gas governor (MDG ELITRE with model no. EL-125) comes with the hob.

If the jets you require are not supplied, please contact your Miele dealer or the Service Department.

Conversion to another type of gas is described under "Conversion to another type of gas".


LPG Gas Connection for HK

Stainless steel braided flexible hose connection

Please use approval stainless steel braided flexible tubing bearing EMSD Approval marking (such as EMSD APPROVA GTXXXX and gas accessories and gas cock for connection from 1/2 PT connect up to gas supply point).

LPG Gas Connection for SG

Elbow joint connection

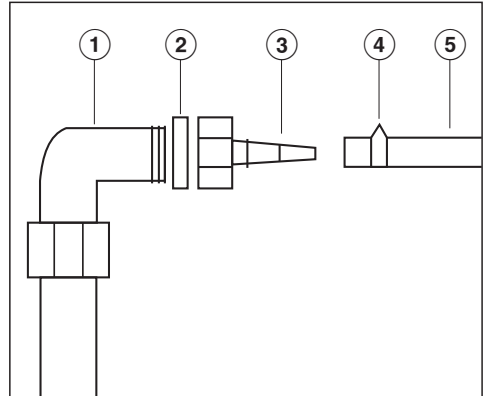

① elbow joint

② gasket

③ nozzle

④ ring

⑤ rubber hose

The gasket depicted above is to prevent gas leakage. After installation, turn on the gas supply and use soap solution (never use naked flame) to check for gas leakage.

Town Gas Connection:

Please use approved stainless steel braided flexible tubing bearing EMSD approval marking (such as EMSD APPROVAL GTXXXX and gas cock for connection connect from ½ " G connector to governor, and connect up to gas supply point.

Warning

Under the Gas Safety (Registration of Gas Installors and Gas Contractor) Regulations, only registered gas installors (registered to the appropriate class) employed by registered gas contractors can personally carry out gas installation work. "Gas Installation Work" includes the fabrication, connection, or replacement of gas pipework, appliances and fitting.

Please do not use aluminium cover.

Gas connection

Connecting the appliance


The gas connection of the appliance has a 1/2" tapered screw thread. Connection can be made by:

- an appropriate rigid connection
- a flexible gas connection pipe in accordance with DIN 3383 Section 1

A flexible gas connection pipe must not exceed 2 m in length.

A suitable sealant must be used to ensure that the connection is secure.

Using a 90° angle

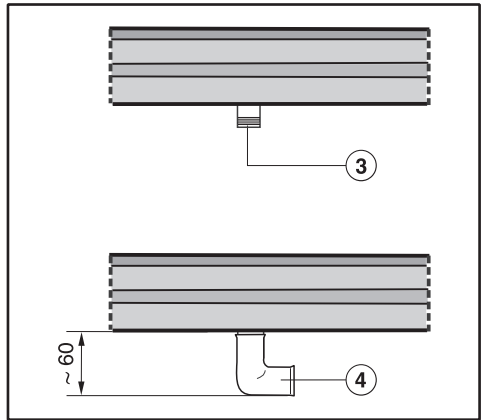


③ Gas connection R 1/2 - ISO 7-1 (DIN EN 10226)

④ 90° angle

Using a 90° angle will increase the building-in depth in the area of the gas connection by approx. 60 mm.

Conversion to another type of gas

 Connection to the gas supply, or conversion from one type of gas to another, should only be undertaken by a registered gas installer under the gas safety regulations (Registration of Gas Installers and Gas Contractors).

When converting to a different type of gas, the main burner jets and the small burner jets have to be changed.

Nominal rating at high setting

	Gas type	kW
Normal burner	Town Gas (10 mbar)	1.80
	Natural Gas (20 mbar)	1.80
	Liquid Petroleum Gas (29 mbar)	1.80 / 131 g/h
Large burner	Town Gas (10 mbar)	3.00
	Natural Gas (20 mbar)	3.00
	Liquid Petroleum Gas (29 mbar)	3.00 / 218 g/h
Total output	Town Gas (10 mbar)	4.80
	Natural Gas (20 mbar)	4.80
	Liquid Petroleum Gas (29 mbar)	4.80 / 349 g/h

Nominal rating at low setting

	Gas type	kW
Normal burner	Town Gas (10 mbar)	0.35
	Natural Gas (20 mbar)	0.35
	Liquid Petroleum Gas (29 mbar)	0.35
Large burner	Town Gas (10 mbar)	0.50
	Natural Gas (20 mbar)	0.50
	Liquid Petroleum Gas (29 mbar)	0.50

Screw in the new jets according to the following table.

Jet table

	Main jet \varnothing	Low setting jet \varnothing
Town Gas		
Normal burner	1.85	0.74
Large burner	2.80	0.88
Natural Gas		
Normal burner	1.00	0.42
Large burner	1.28	0.52
Liquid Petroleum Gas		
Normal burner	0.67	0.27
Large burner	0.87	0.32


The jet markings refer to 1/100 mm of the jet diameter.

Conversion to another type of gas

Changing the jets

Disconnect the gas hob from the electricity supply by switching off at the socket and withdrawing the plug or by disconnecting the mains fuse.

To change the main jets

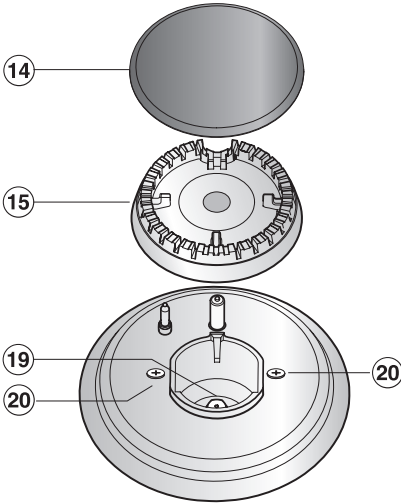


- Take off the pan support, burner cap ⑭ and the burner head ⑮.
- Using an M7 socket spanner unscrew the main jet ⑲.
- Change the main jet.

Changing the small jets

The upper part of the appliance has to be removed before the small jets can be changed.

- Remove burner cap ⑭ and burner head ⑮.
- Pull the control knobs off.
- Loosen screws ⑳.
- Remove the upper section of the appliance carefully.
- Using a small screwdriver, unscrew small jet ㉑ in the gas fitting.

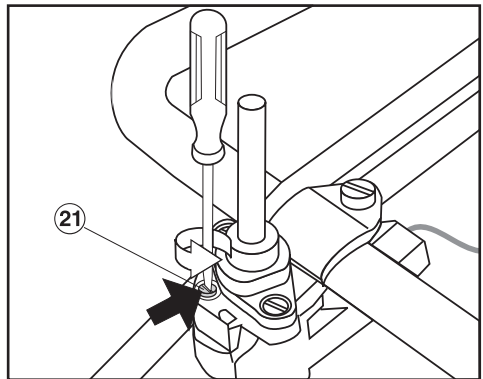

- Pull out the jet with a pair of pliers.
- Fit the correct jets securely (see jet table).
- Finally, secure the jets against inadvertent loosening with sealing wax.

After changing the jets

- Reassemble the burner parts in the reverse order.
- Check all gas fittings for leaks by operating the burner without the upper section of the hob in place (use a match to ignite the flame).
- Remove the loose burner parts again.
- Replace the upper section of the hob.
- Screw the burner bases into place, and replace the other parts of the burner. Take care to reassemble the different parts in the correct order.
- Replace the control knobs.
- Finally ignite all the burners to check that they are operating correctly.

The flame must not go out on the lowest setting, or when the control is turned quickly from a high to a low setting.

On the highest setting, the flame must have a distinctive and visible core.

- Stick the label supplied with the jets above the label stating the type of gas being used.

After sales service, data plate

In the event of any faults which you cannot remedy yourself, or if the appliance is under guarantee, please contact:

 
- Your Miele dealer, or
- the Miele Customer Contact Centre (see back cover for address).

Please note that telephone calls may be monitored and recorded to improve our service.

When contacting Miele, please quote the model and serial number of your appliance which are given on the data plate.

N.B. A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

Space in which to stick the extra data plate supplied with the appliance. Ensure that the model number is the same as the one on the front of these instructions.



Model No. CS1013-1

Cutout Dimensions

Width 272 mm

Depth 500 mm

Build-in depth 87 mm

(Allow additional space below for connection to the gas supply)

Unit Dimensions

Width 288 mm

Depth 520 mm

Electrical connection

Voltage 220 - 240 V

Fuse rating 13 A

Gas Type	Town Gas (with Gas Governor)	Liquid Petroleum Gas
Connection Pressure	10mbar / 1 kPa	29mbar / 2.9 kPa
Heat Output for Hong Kong		
Front burner	1.8 kW	1.8 kW
Rear burner	3.0 kW	3.0 kW
Heat Output for Singapur		
Front burner	2.0 kW	2.3 kW
Rear burner	3.5 kW	3.5 kW



South Africa

Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel.: (011) 875 9000, Fax: (011) 875 9035
Internet: www.miele.co.za
E-mail: info@miele.co.za

Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay
Hong Kong
Tel: (852) 2610 1331
Fax: (852) 2610 1013
Email: mielehk@miele.com.hk

Miele Boutique

Ground Floor
111 Leighton Road
Causeway Bay
Hong Kong
Tel.: (852) 2890 1018
Fax: (852) 2890 1199
E-mail: showroom@miele.com.hk

International Head Office

Miele & Cie. KG
Carl-Miele-Straße 29
33332 Gütersloh
Germany

Miele (Hong Kong) Limited

香港九龍灣宏泰道 23 號
Manhattan Place 41 樓 4101 室
電話: (852) 2610 1331
傳真: (852) 2610 1013
電子郵件: mielehk@miele.com.hk

Miele 陳列室

香港銅鑼灣禮頓道 111 號地下
電話: (852) 2890 1018
傳真: (852) 2890 1199
電子郵件: showroom@miele.com.hk