

## Quick Start Guide




for dishwashers

**These short instructions are not a substitute for the operating instructions supplied with the appliance.**


Please read the operating instructions supplied with your dishwasher before using it for the first time and take note of the Warning and Safety instructions, as well as the full descriptions on how to use your appliance.

en-AU, NZ

# Guide to the appliance

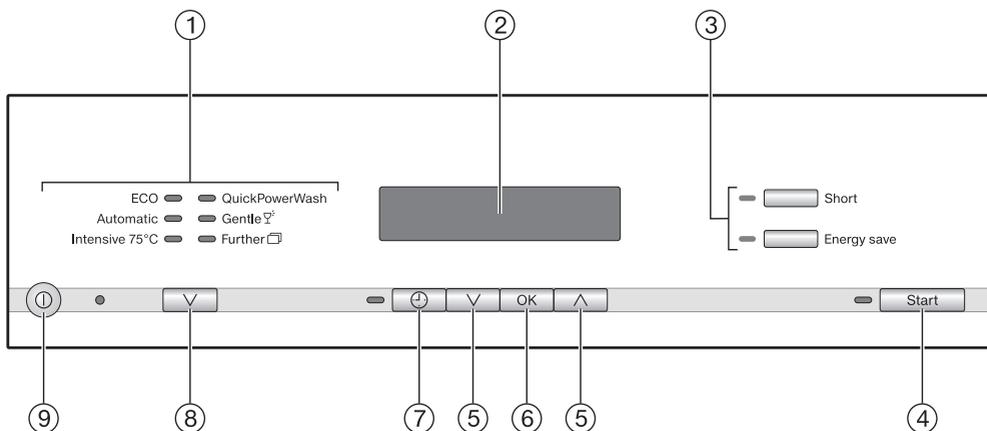

- ① Programme selection
- ② Display
- ③ Option buttons with indicator lights
- ④ *Start* button with indicator light
- ⑤ Arrow buttons  $\nabla/\wedge$
- ⑥ OK button
- ⑦  $\odot$  button (FlexiTimer) with indicator light
- ⑧ Programme selector button  $\nabla$
- ⑨ On/Off button  $\text{\textcircled{I}}$

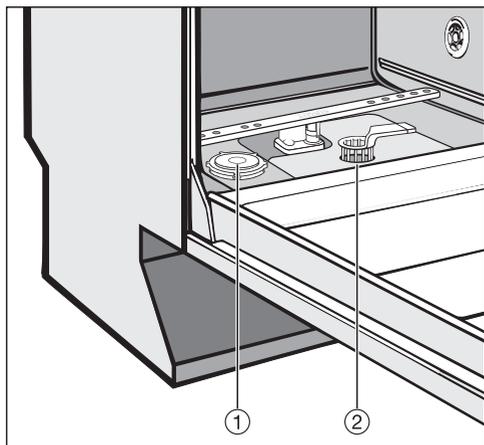

- ① Salt reservoir
- ② Filter combination

# Brief instructions

## ❶ Filling the salt reservoir ↻


- Remove the lower basket and unscrew the salt reservoir cap.

Water or saline solution will run out of the reservoir when the cap is removed.

It should therefore only be removed in order to refill the salt reservoir.

⚠ Dishwasher detergent will damage the water softener. Do not fill the salt reservoir with powder or liquid detergent.

- Fill the reservoir with approx. 2 litres of water (first use only).
- Place the funnel provided over the salt reservoir and carefully fill with dishwasher salt until the reservoir is full.
- Clean any excess dishwasher salt from around the reservoir opening and then screw the cap on again firmly.
- Immediately after filling the salt reservoir, run the *QuickPowerWash* programme with the *Short* programme option selected and without any crockery in the dishwasher, to remove any traces of salt from the cabinet.

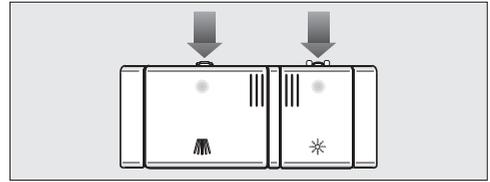

## ❷ Adding rinse aid ✨

- Press the button on the lid of the rinse aid reservoir in the direction of the arrow until the flap springs open.
- Add rinse aid only until it is visible in the opening.
- Close the flap firmly. It should click into place.
- Wipe up any spilled rinse aid. This prevents over-foaming occurring during the next programme.

## ❸ Load the dishwasher

## ❹ Adding detergent 🍷

- Follow the dosage recommended by the manufacturer on the packaging.
- Press the opening catch on the detergent dispenser. The flap will spring open.

The flap is always open at the end of a programme.

- Add the required amount of detergent and close the flap.

## 5 Switching on the dishwasher

- Close the door.
- Turn on the tap if it is turned off.
- Press the ① button for at least two seconds.

## 6 Selecting a programme

- Use the programme selector button to select the programme required.

Further programmes are selected via the *Further*  option.

## 7 Selecting programme options (if required)

You can select and deselect the options using the appropriate buttons and the display.

The option selected will remain active for that particular programme until the setting is changed.

- Press the button for the option you want.

The indicator light for the relevant button will light up.

## 8 Activating FlexiTimer (if required)

- Press the  button.
- Use the  $\nabla/\wedge$  arrow buttons to set the required function and confirm your selection with the *OK* button.
- Use the  $\nabla/\wedge$  arrow buttons to set the time and confirm with *OK*.

## 9 Starting the programme

- Press the *Start* button.

## 10 At the end of a programme - Switching off

The programme has finished when  Finished appears in the display and the door has opened slightly (if applicable).

In the *QuickPowerWash* programme the door will not open until a few minutes after the programme has finished.

The drying fan may continue to run for a few minutes at the end of the programme.

- Open the door fully so that the door catch rail retracts again.
- Switch the dishwasher off with the ① button.

 If you have deactivated the automatic door opening function but would still like to open the door at the end of the programme, then make sure that you open the door fully.

Otherwise steam from the dishwasher could damage the edge of the worktop because the fan is no longer running.

## 11 Unloading the dishwasher

Dishes tend to break and chip more easily when they are hot. Allow the dishes to cool until they are comfortable enough to handle before unloading them.

## Cleaning and care

### Checking the filters in the wash cabinet


 This dishwasher must not be used without all the filters in place.

The message **Check filters** will appear in the display after every 50 programme cycles (factory default setting).

- Check the condition of the filters regularly and clean them if necessary.
- Then confirm the message with **OK**.


### Cleaning the filters

- Switch the dishwasher off.

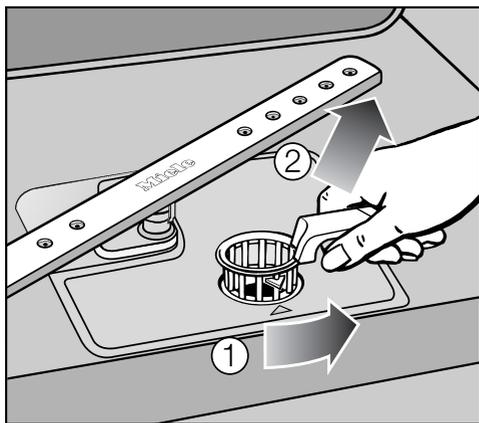

- Turn the handle anti-clockwise to release the filter combination ①.
- Lift the filter combination out of the dishwasher ②. Remove any coarse particles and rinse the filter well under running water. Use a nylon brush if necessary.

 Ensure that coarse soil doesn't get into the circulation system and cause a blockage.

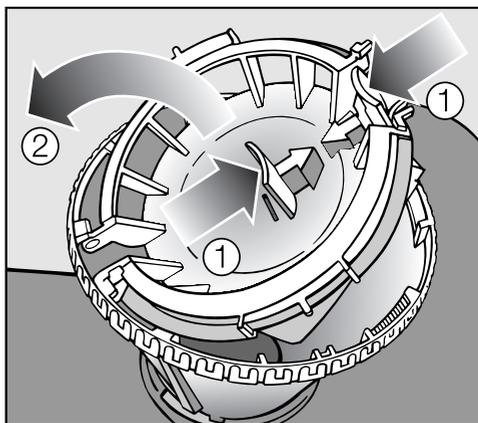

To clean the inside of the filter, the flap must be opened:

- Press catches ① together in the direction of the arrows as shown, and open the filter ②.
- Rinse all the filters under running water.
- Then close the flap so that the catch engages.
- Replace the filter combination so that it lies flat in the base of the wash cabinet.
- Then turn the handle clockwise until both arrows point towards each other. This will lock the filter combination in place.


## Cleaning the spray arms

Particles of food can get stuck in the spray arm jets and bearings. The spray arms should therefore be inspected and cleaned regularly (approx. every 4 - 6 months).


- Switch the dishwasher off.

Remove the spray arms as follows:

- Take out the cutlery tray (if your dishwasher is fitted with one).
- Push the **top** spray arm upwards to engage the inner ratchet. Then unscrew the spray arm.

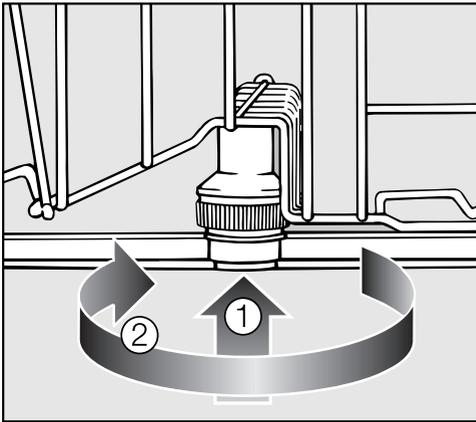


- Push the **middle** spray arm upwards ① to engage the ratchet. Then unscrew the spray arm ②.
- Remove the lower basket.

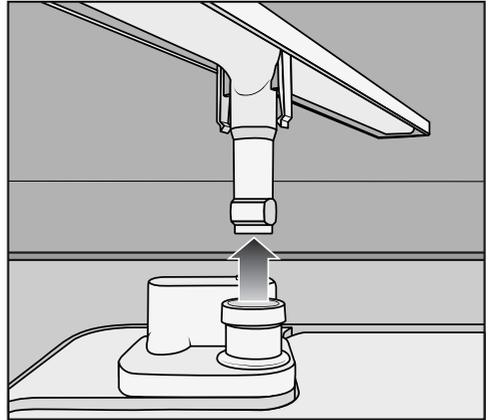

- Pull the **lower** spray arm firmly upwards to remove it.
- Use a pointed object to push food particles into the spray arm jets.
- Rinse thoroughly under running water.
- Refit the spray arms and check that they rotate freely.

# Programme chart

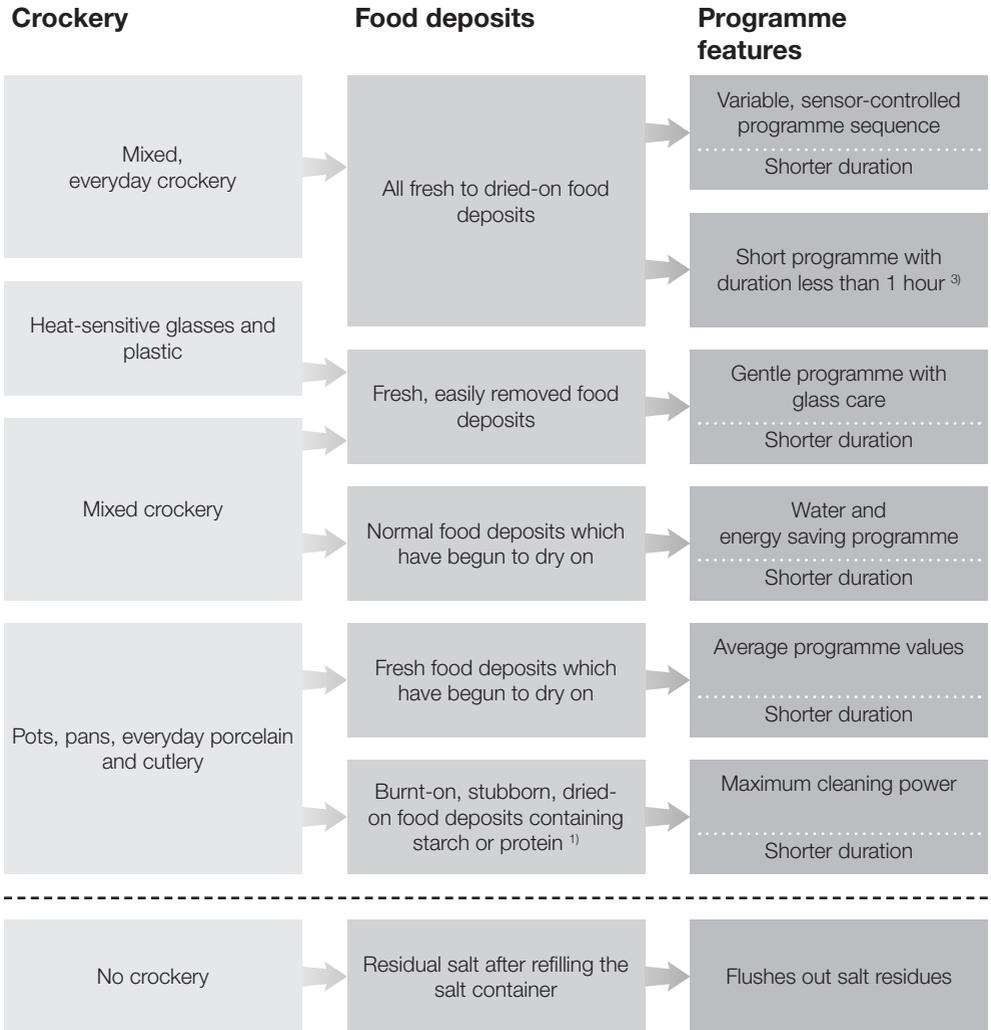

<sup>1)</sup> Food such as potatoes, pasta, rice or stews can leave starchy deposits. Deposits containing protein can be left by food such as meat, fish or eggs and bakes.

Programme	Detergent	
	Compartment I <sup>2)</sup>	Compartment II <sup>2)</sup>
<b>Automatic</b> ----- <b>+short</b>	-	25 ml or 1 tab
<b>QuickPowerWash</b>	-	1 tab <sup>3)</sup>
<b>Gentle</b>  ----- <b>+short</b>	-	20 ml or 1 tab
<b>ECO</b> ----- <b>+short</b>	-	25 ml or 1 tab
<b>Light soiling 55°C</b> <sup>4)</sup> ----- <b>+short</b>	-	25 ml or 1 tab
<b>Intensive 75°C</b> ----- <b>+short</b>	10 ml	25 ml or 1 tab
<hr style="border-top: 1px dashed black;"/>		
<b>QuickPowerWash +short</b>	-	-

<sup>2)</sup> see "Detergent"

<sup>3)</sup> best cleaning results are only achieved with Miele's quick dissolving UltraTab Multi

<sup>4)</sup> in "Further " (depending on model)